


 



 


 
 




# Lock Replacement Parts

## Front Desk Unit

### Accessories

Item	Description	Part #
<b>Accessories</b>		
	Battery Pack for FDU	132-507568
	FDU to FDU (or PC) cable 	011-507794
	SolitaireSMART External Encoder 	120-509645
	Kaba SMART and Keycard Encoder (Wall Mount) 	117-510800-626K
<b>Programming Module</b>		
	FDU to Exit Device (720 Series) 	063-510142
	FDU to 710 or 710-II Lock Series 	063-507454
	FDU to SolitaireSMART Lock 	063-509672
	FDU to E-760 Series (Lock or Exit Device) 	063-510210
	FDU to System 700 II Series 	502366

<b>FDU Power Supplies</b>		
	For US & Canada 120V / 60Hz 	126-507787
	For Australia 240V / 50Hz 	126-507790
	For Europe 240V / 50Hz 	126-507788
	For United Kingdom 220V / 50Hz 	126-507789

# Lock Replacement Parts

## Front Desk Unit

Accessories



Item	Description	Part #
<b>FDU Power Supplies with Y-Cable use with SMART Card External Encoder</b> (Axiolum version C152 Version 1 only)		
	For US & Canada 120V / 60Hz	126-509735
	For Australia 240V / 50Hz	126-509722
	For Europe 240V / 50Hz	126-509723
	For United Kingdom 220V / 50Hz	126-509724

### Printer Equipment

Printer (Star)	135-502153
Cable for printer	011-503593
Adapter DB9 female to RG45 female	125-503487
Paper for printer	1A-PAPER
Ribbon for printer	1A-RIBBON