


InSync™ D Operation Instructions

Unlocking your door from the outside

1. Fully insert your RFID key into the lock port.
2. Wait until GREEN light flashes once.
3. Rotate the key as you would a standard mechanical deadbolt.

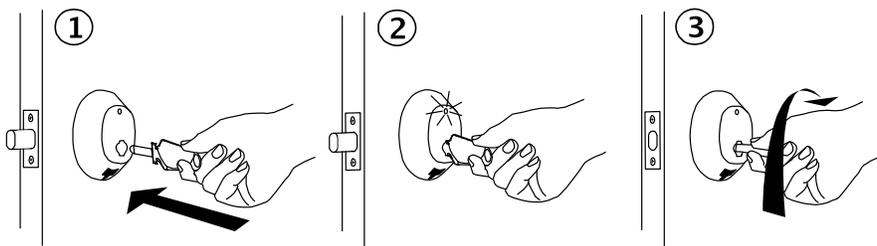



Locking and unlocking your door from the inside

- To lock the door from the inside, rotate the thumbturn to lock the deadbolt
- To unlock the door from the inside, rotate the thumbturn in the opposite direction

Locking your door from the outside

1. Shut the door, then insert your key into the lock port.
2. Wait until the GREEN light flashes once.
3. Rotate the key to extend the deadbolt.

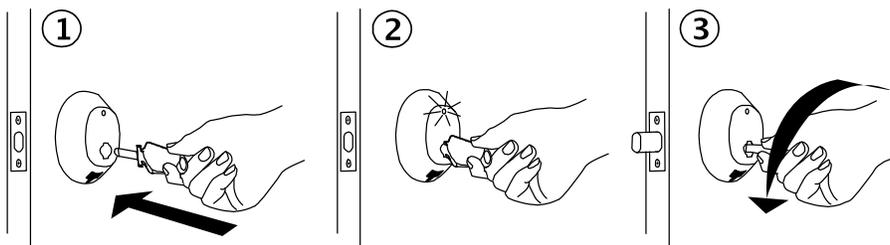

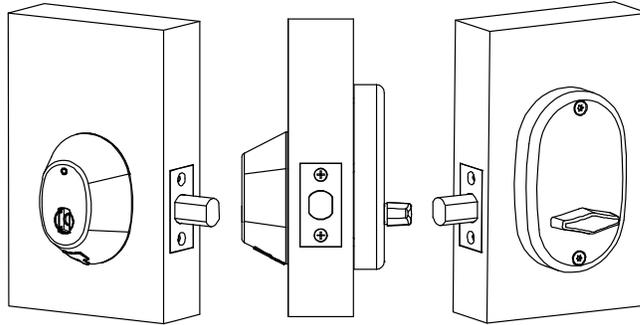


Frequently Asked Questions

1. How does my new InSync D lock work?

Your InSync D lock communicates unique and encrypted access codes to the lock via radio frequency (RF) signals

2. What do I need to operate my lock?

To operate your lock, you will need an RFID key.

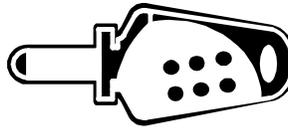

3. What kind of information is contained in my RFID key that enables it to operate the lock?

The barrel of each RFID key is encoded with a unique, encrypted access code.

4. What does it mean if the GREEN light flashes followed by six RED flashes?

This sequence signals that the battery is low. Please report this to management to avoid a potential lockout.

Note: Please report any other light signals to management to avoid a potential lockout.

Disclaimer: While reasonable efforts were made to ensure the accuracy of this document at the time of printing, Kaba assumes no liability for any errors or omissions. This information is subject to be revised without notice, and changes may be incorporated in future releases. © 2015 Kaba Access & Data Systems Americas. All rights reserved.

Kaba Access & Data Systems Americas
2941 Indiana Ave.
Winston-Salem NC 27105
USA
1-800-849-8324

www.kaba-adsamericas.com

LIT1092 1015