

Installation Instructions

C100 function cam positioning for 60 apartment function



For online instructions, assistance or warranty information:
Call 1-800-392-5209 or visit <https://dhwsupport.dormakaba.com/hc/en-us>

1 Instructions

1.1 C100 function cam positioning instructions for 60 apartment function

Fig.1a (Right-hand)—Fig.1b (Left-hand)

⚠ CAUTION: Before installing the core and tailpiece, check the position of the inside locking cam. The locking cam ears must be in the position shown in Fig.1a.

After installing the cores, the inside and outside key should turn a full 360°. If the inside or outside key turns only 180° in either direction, follow these steps to correct the operation:

- 1.1.1 Remove the inside lever and core for KIL. For I/C remove the inside core and tailpiece with the control key.
- 1.1.2 Looking into the core hole, turn the locking cam ears counter clockwise to match the position shown in Fig.1a or Fig.1b. Reinstall the lever, core and the tailpiece.
- 1.1.3 With the door open, check the operation of the levers: the outside lever is locked and unlocked by fully rotating the inside key 360°—counterclockwise to lock, clockwise to unlock.

Fig.1a (Right-hand)

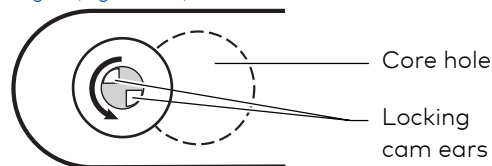


Fig.1b (Left-hand)

