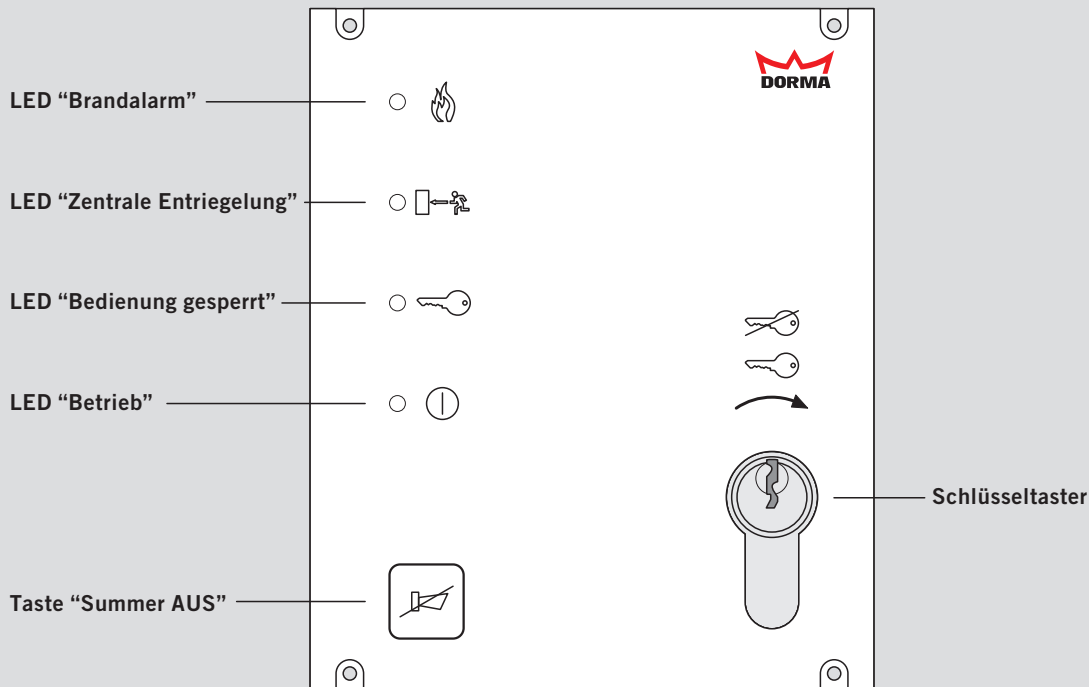








Bedienungsanleitung

D



- 
LED "Brandalarm"
LED leuchtet bei Feueralarm von BMZ
- 
LED "Zentrale Entriegelung"
LED leuchtet bei zentraler Entriegelung.
- 
LED "Bedienung TE60 Control 2L gesperrt"
LED leuchtet wenn der Betrieb durch den internen Schlüsseltaster gesperrt wurde.
- 
LED "Betrieb"
LED leuchtet wenn die Anlage und der Prozessor in Betrieb sind.

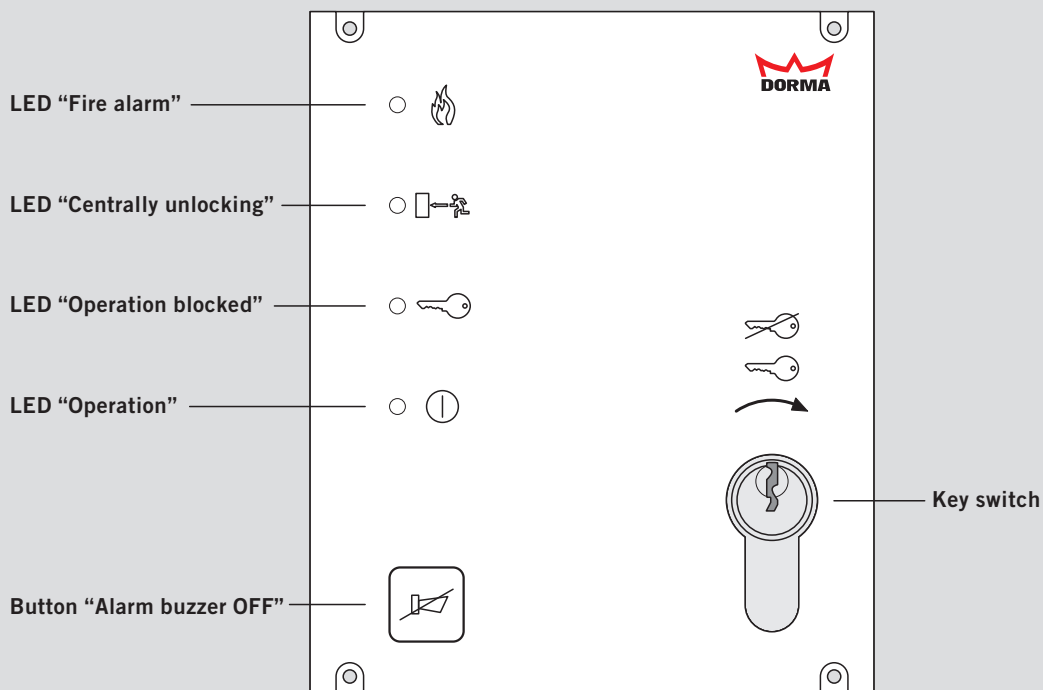

Taste "Summer AUS"
Die Taste dient zur Quittierung des Alarmsummers.






Schlüsseltaster
Der Schlüsseltaster dient zum Sperren und Entsperren der Bedienmodule TE60 Control 2L.


Parametrierung mit LON Inbetriebnahmetool über Standard-Netzwerkvariablen (SNVTs) oder als Paralleltabelleau zur TMS-Soft


Operating Instructions

GB



- 
LED "Fire alarm"
 LED lights when alarm from fire alarm system
- 
LED "Centrally unlocking"
 LED lights when centrally unlocking.
- 
LED "Operation TE60 Control 2L blocked"
 LED lights when operation was blocked of the internal key switch.
- 
LED "Operation"
 LED lights when the system and the processor are in operation.


Button "Alarm buzzer OFF"
 The button is used for acknowledgement of the alarm buzzer.


Key switch
 The key switch is used for blocking and unblocking of the operating modules TE60 Control 2L.

Parametrization with LON commissioning tool via standard network variables (SNVTs) or parallel tableau to TMS-Soft