


Bedienungsanleitung

D

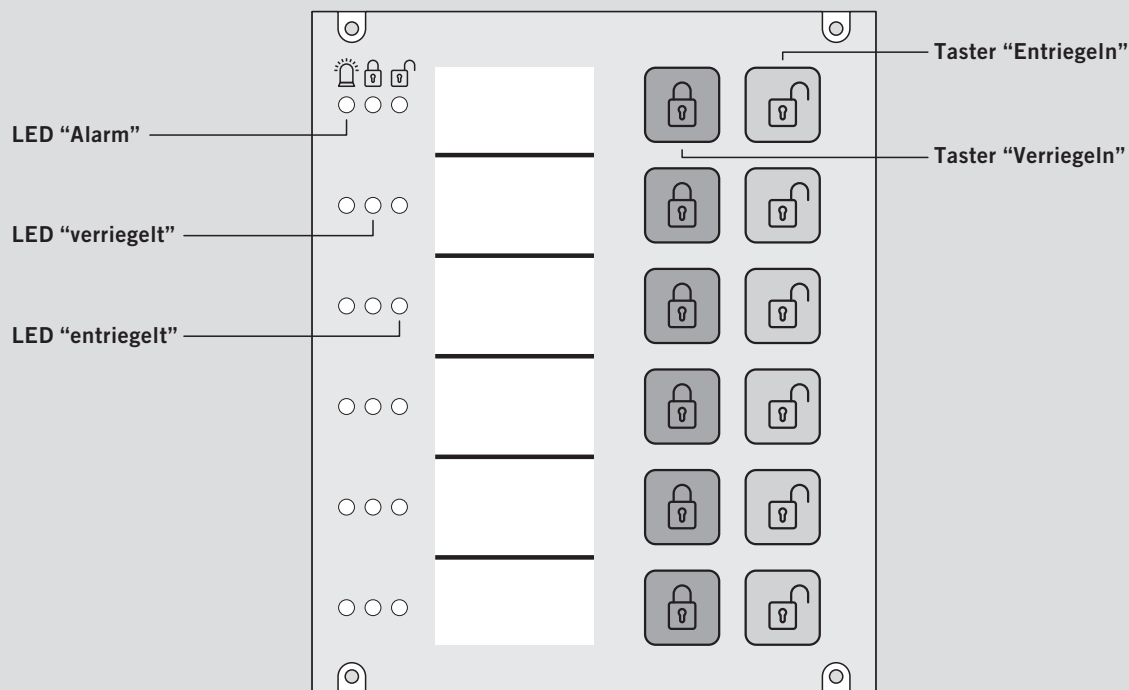

LED "Alarm"
LED leuchtet bei Alarm vom Türterminal.



LED "verriegelt"
LED leuchtet wenn Tür verriegelt.



LED "entriegelt"
LED leuchtet wenn Tür entriegelt.



Taste "Verriegeln" (rot)
Die Taste dient zur Verriegelung der Tür.



Taste "Entriegeln" (grün)
Die Taste dient zur Entriegelung der Tür.


Parametrierung mit LON Inbetriebnahmetool über Standard-Netzwerkvariablen (SNVTs) oder als Paralleltabelleau zur TMS-Soft

SNVTs I/O-Modul DCW®/LON mit TL-S 8 / RZ12 (siehe Anleitung: **WN 057172-45532**)
nvi Relais 01 - Kurz- / Dauerentriegelung
nvi Relais 04 - verriegeln

SNVT I/O-Modul DCW®/LON mit SVP-S 22 (siehe Anleitung: **WN 057172-45532**)
nvi Relais 01 - Entriegelung

Operating Instructions

GB

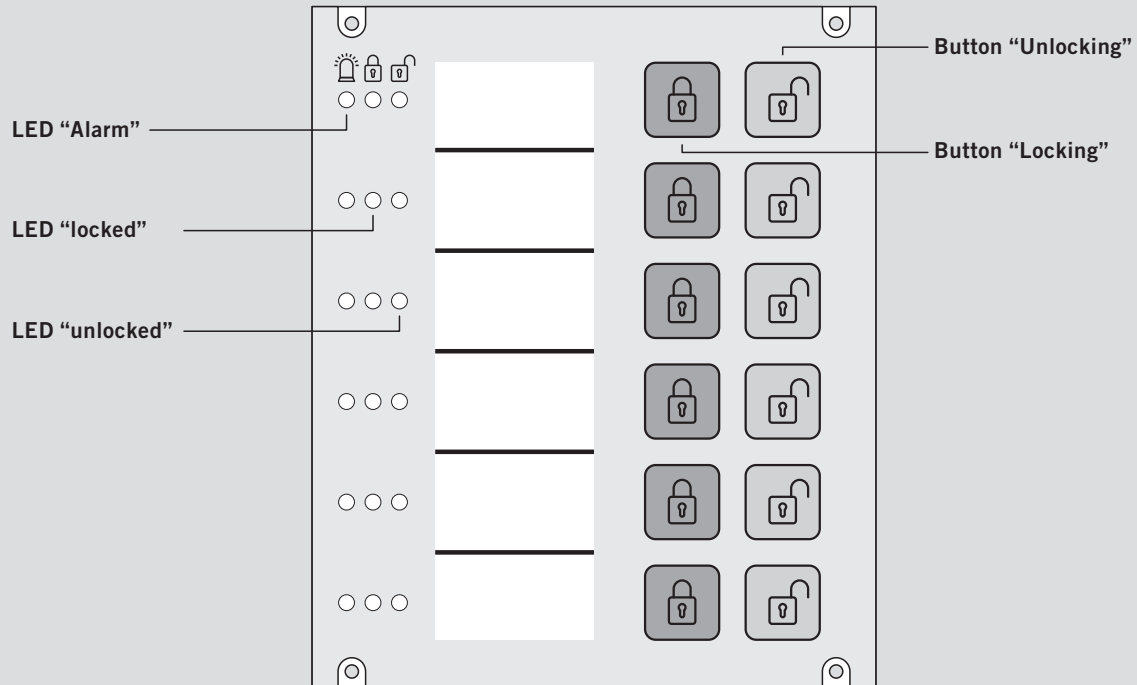

LED "Alarm"
LED lights when alarm from door terminal.



LED "locked"
LED lights if door is locked.



LED "unlocked"
LED lights if door is unlocked.



Button "Locking" (red)
The button is used for locking of the door.



Button "Unlocking" (green)
The button is used for unlocking of the door.

Parametrization with LON commissioning tool via standard network variables (SNVTs) or parallel tableau to TMS-Soft

SNVTs I/O-Modul DCW®/LON with TL-S 8 / RZ12 (see instruction: **WN 057172-45532**)
nvi Relais 01 - short- / permanent unlocking
nvi Relais 04 - locking

SNVT I/O-Modul DCW®/LON with SVP-S 22 (see instruction: **WN 057172-45532**)
nvi Relais 01 - unlocking