

INSTALLATION



3909 SURFACE AND FLUSH MOUNT ROCKER SWITCHES

Switches

Instructions

3909S (Surface Mount)

1. Remove decorative bezel around switch.
2. Mount switchbase in desired location.
3. Connect wires under appropriate terminals (Fig. 1).
4. Replace decorative bezel.

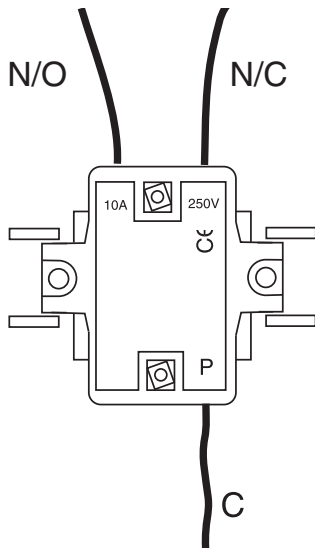


Fig. 1

3909F (Flush Mount) (Special Order Only)

1. Remove decorative cover of switch (key symbol) using a slot screwdriver to carefully pry it off.
2. Remove decorative bezel by grasping metal tabs and pulling bezel straight off.
3. Connect wires under appropriate terminals (Fig. 2).
4. Drill a 2-1/8" (55mm) hole in the drywall. Insert switch into hole. Tighten the two metal slot screws to extend drywall anchors, until switch is secure.
5. Replace decorative bezel and switch cover.

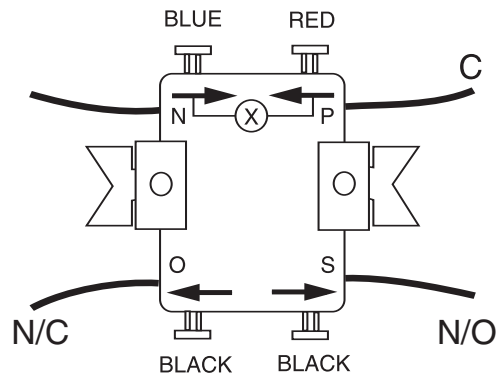


Fig. 2

Description	Switch Mode	Switch Configuration	Switch Rating	Standard Finish
3909-MO Rocker Switch	Momentary Action	SPDT N/O or N/C	10A @250V UL/CSA	Beige (plastic)
3909-MA Rocker Switch	Maintained Action	SPDT N/O or N/C	10A @250V UL/CSA	Beige (plastic)

NOTE: Specifications are subject to change without notice. N/C – Normally Closed; N/O – Normally Open