


Right red light is blinking

RS485 mode — offline state
(not communicating with
Access Manager)




No lights on top

RS485 mode — online state

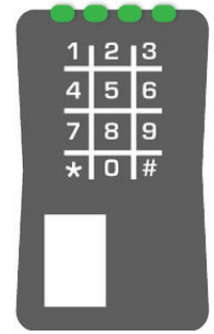


Solid green lights on top

Reader is in door open state

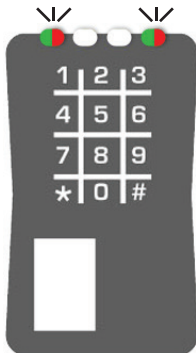


End lights blinking multicolor

RS485 or SDU mode —
requesting a PIN

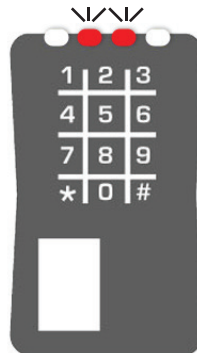


Middle red lights blinking

RS485 or managed mode —
reader is in sync with Access Manager

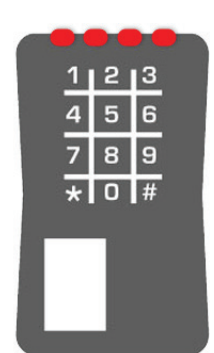


Solid red lights on top

Wiegand, managed or SDU mode
— online state

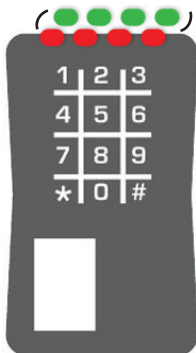


Alternating red-green rows

Wiegand or managed mode —
requesting a PIN

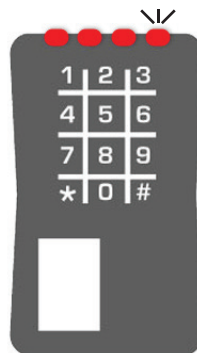

Solid reds; right light blinking

Managed mode — offline state

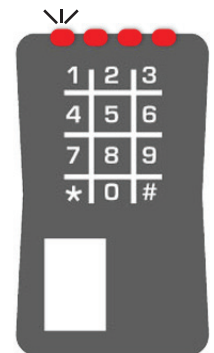

Solid reds; left light blinking

SDU mode — offline state