



UNICON CL10 LOCK USER OPERATIONS

= Green Flash = Red Flash = Yellow Flash = Beep

CCW = Counterclockwise CW = Clockwise

ERROR =

To CLEAR an entry, **press and hold** until

SET LOCK USER COMBINATION AND SECURE LOCK

1. Close door and turn lock knob CCW to the "locked" position.
2. Enter a 4-7 digit combination. **Press and hold** # until .
3. Enter combination again to verify. **Press and hold** until .

, long , long Check to ensure lock is locked.

UNLOCK WITH LOCK USER COMBINATION

1. Enter the 4-7 digit lock user combination. , long
2. Turn lock knob CW to "unlocked" position and open door.

ATTENTION: Please leave container unlocked when finished with use.

RELOCK WITH LOCK USER COMBINATION

1. Close door and turn lock knob CCW to the "locked" position.
2. Enter the 4-7 digit lock user combination. **Press and hold** until .

, long , long Check to ensure lock is locked.