













 = Green Flash    = Red Flash    = Yellow Flash    = Beep

**CCW**  = Counterclockwise   **CW**  = Clockwise





 
**ERROR** =      

To **CLEAR** an entry, **press and hold**  until .      








**SET LOCK USER COMBINATION AND SECURE LOCK**

1. Close door and turn lock knob CCW  to the “locked” position.
2. Enter a 4-7 digit combination. **Press and hold** **#** until .
3. Enter combination again to verify. **Press and hold** **▲** until .  
 , long  , long   **Check to ensure lock is locked.**

**UNLOCK WITH LOCK USER COMBINATION**

1. Enter the 4-7 digit lock user combination.  , long  
  2. Turn lock knob CW  to “unlocked” position and open door.
- ATTENTION: Please leave container unlocked when finished with use.**

**RELOCK WITH LOCK USER COMBINATION**

1. Close door and turn lock knob CCW  to the “locked” position.
2. Enter the 4-7 digit lock user combination. **Press and hold** **▲** until .  
 , long  , long   **Check to ensure lock is locked.**