


INSTALLATION

T2T-4 WIRE TOUCH TO TOUCHLESS RETROFIT MODULE

Installation Instructions:

1. Remove switch plate from wall.
2. Disconnect existing wires.
3. Remove adhesive back on antenna and attach to back mounting plate of switch.
4. Connect 3 switch wires to switch.
5. Connect appropriate relay output to signal wires.
6. Connect power leads to red and black.
7. Cap off all remaining wires.
8. Re-install switch to wall. (see applique note)

NOTE: The mechanical switch will still activate in the event of power loss to the module.
Sounder can be enabled/disabled with 3 consecutive activations and 1 continuous activation.
(sounder will acknowledge)

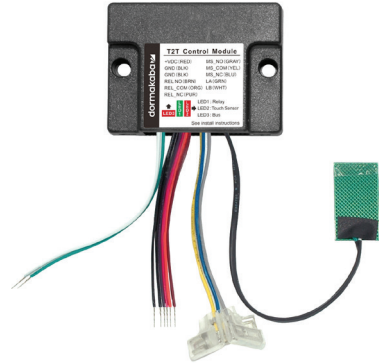

4 Wire installation:
requires the RCM module only.



When applying wave function applique to surface of button, be careful not to block button mounting holes.

