

ITS 96 / ITS 96 FL

+ G 96 N 20

Montageanleitung / mounting instructions

ITS 96 FL

	DORMA Deutschland GmbH Postfach 4009 58 247 Ennepetal	EN 1154:1996+A1:2002	3	8	3	8	3	6	1	1	4
			0432-CPD-0189	EN 1154:1996+A1:2002	3	8	3	6	1	1	4

DOP_0069

ITS 96 FL

	DORMA Deutschland GmbH Postfach 4009 58 247 Ennepetal	EN 1156:1997+A1:2002	3	8	3	8	3	6	1	1	4
			0432-CPD-0037	EN 1156:1997+A1:2002	3	8	3	6	1	1	4


DOP_0069

ITS 96


	dormakaba Deutschland GmbH Postfach 4009 58 247 Ennepetal	EN 1154:1996+A1:2002	3	8	2	4	1	1	1	4
			0432-CPR-00026-31	EN 1154:1996+A1:2002	3	8	3	6	1	1

DOP_0051

WN 058215 45532, 02/20
14/715

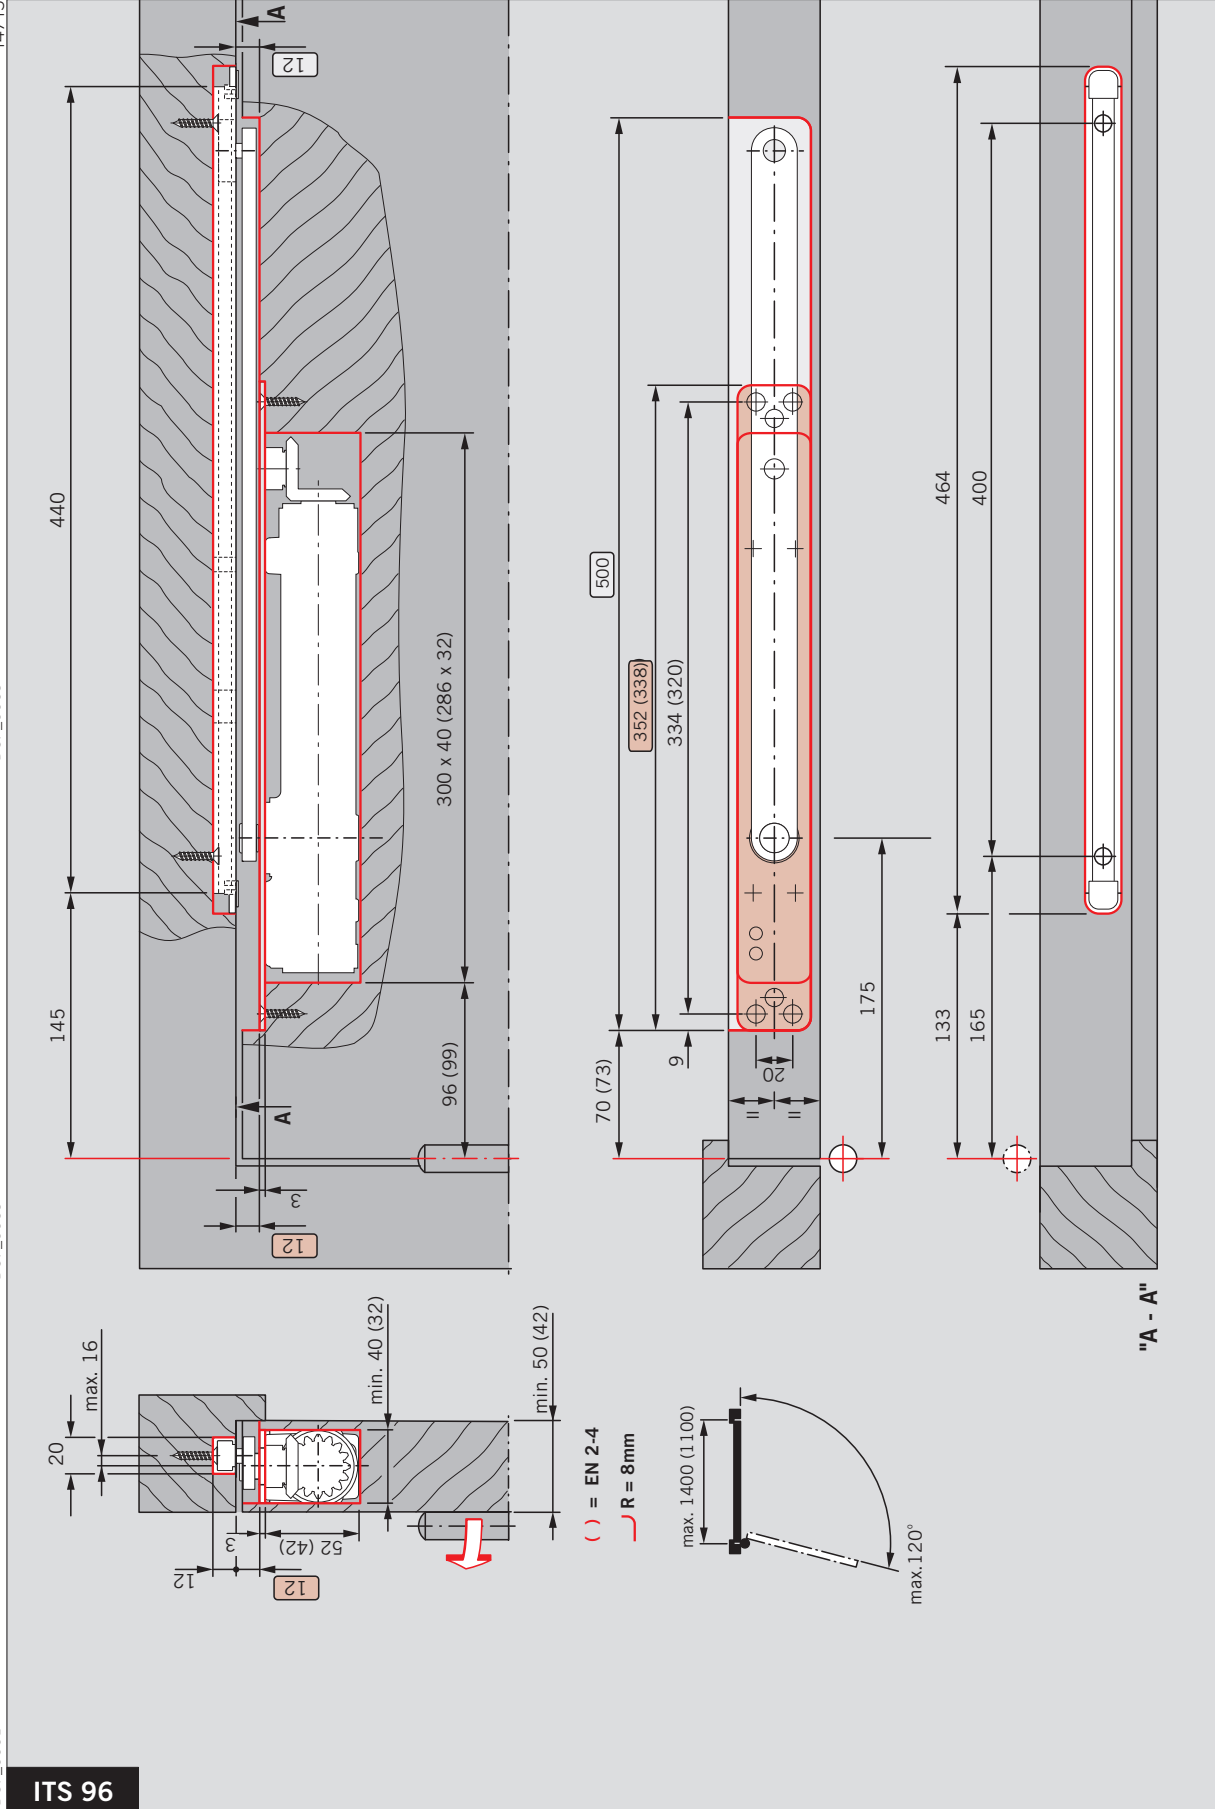


ITS 96 / ITS 96 FL
+ G 96 N 20

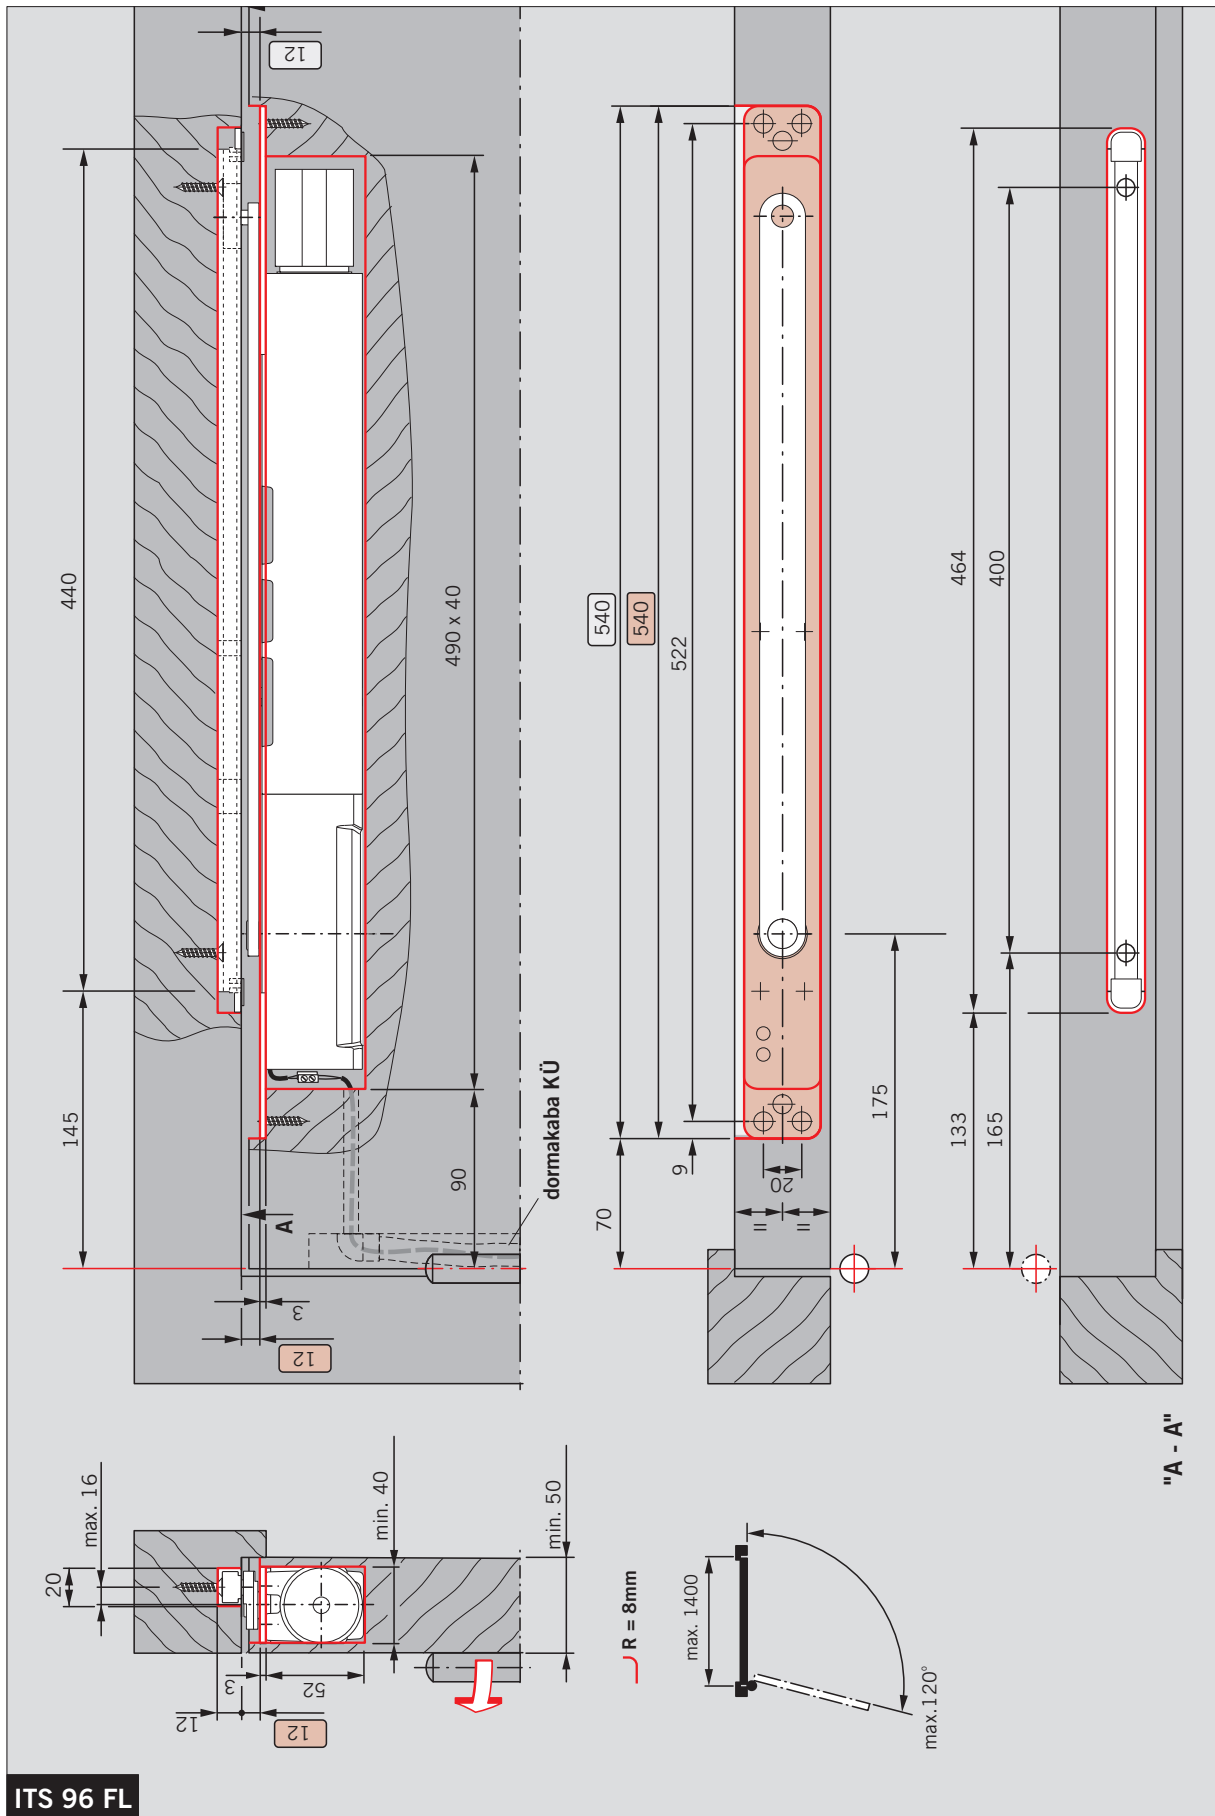


ITS 96 FL

ITS 96 / ITS 96 FL
+ G 96 N 20

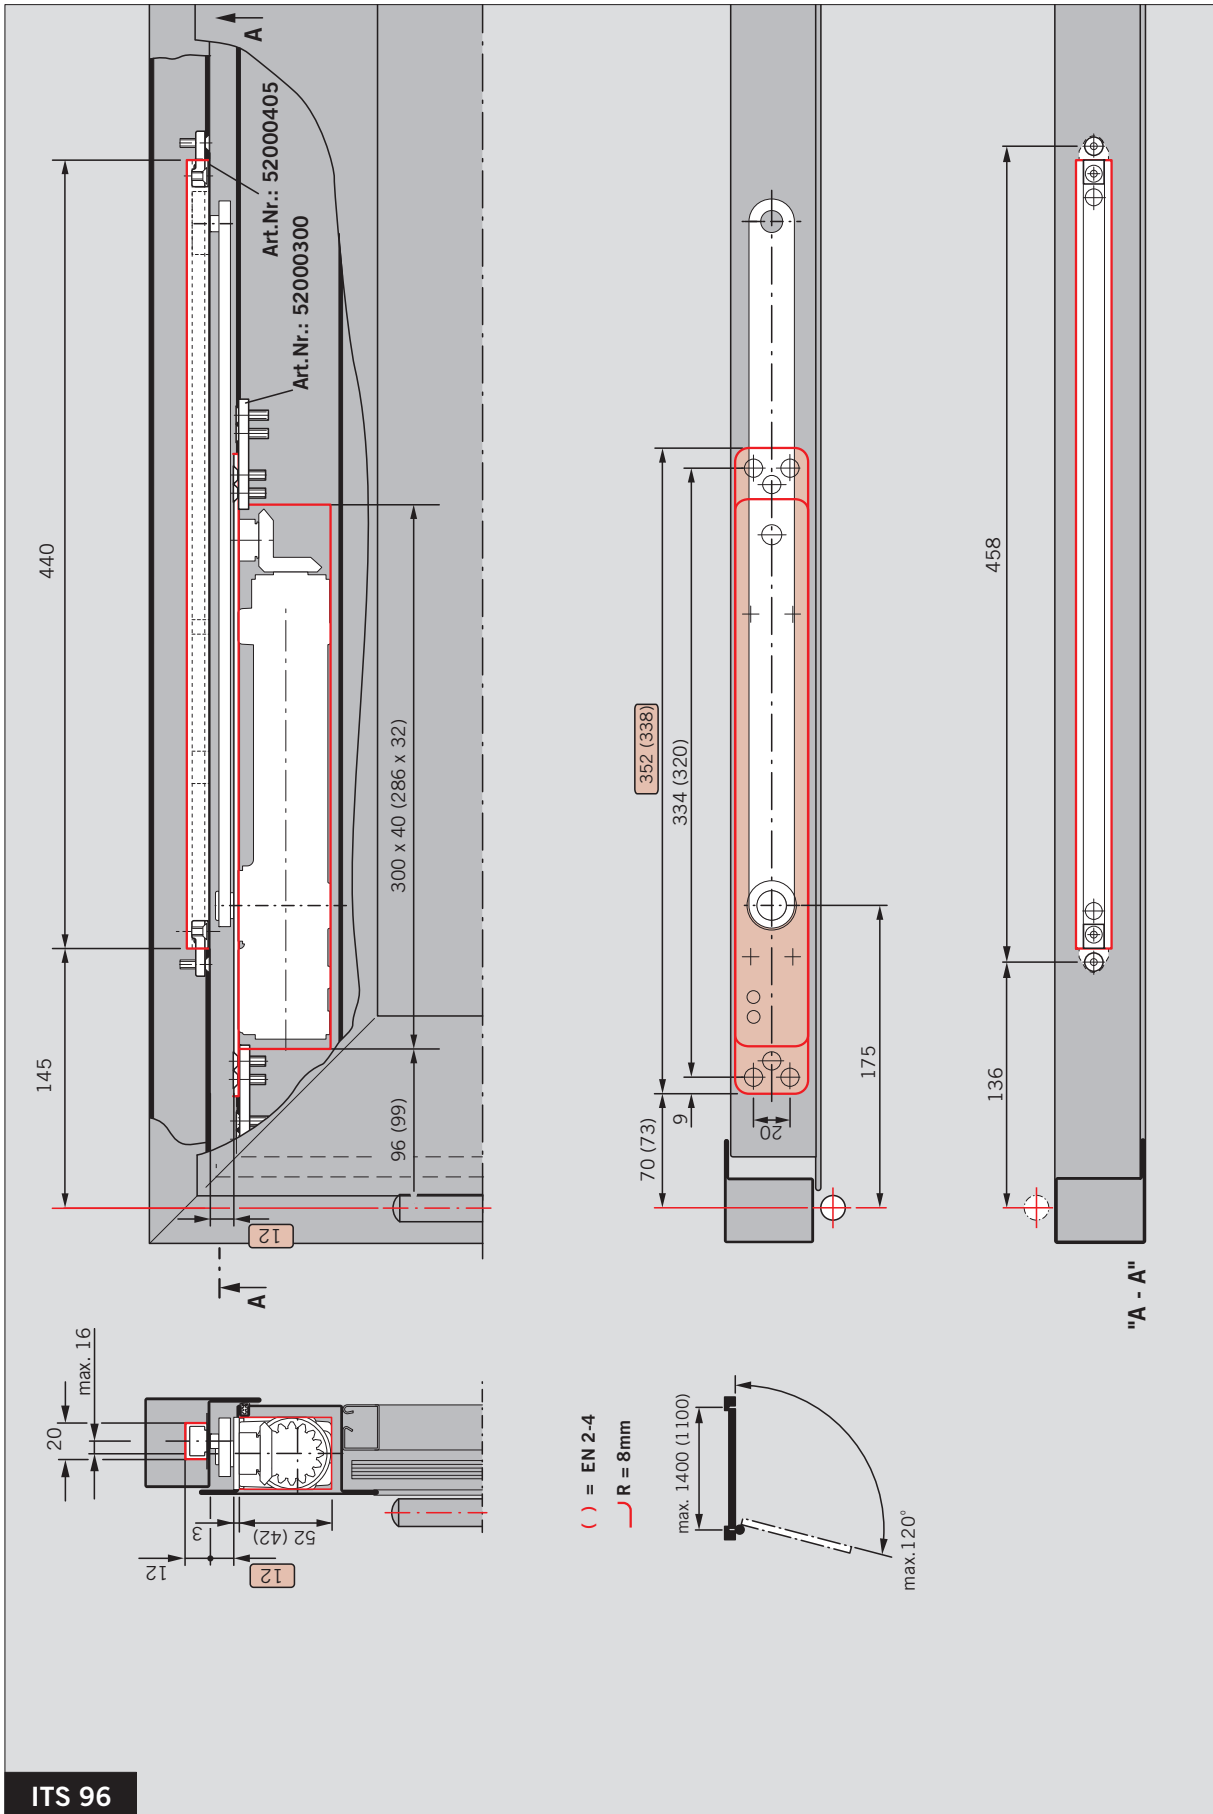







ITS 96

ITS 96 / ITS 96 FL
+ G 96 N 20

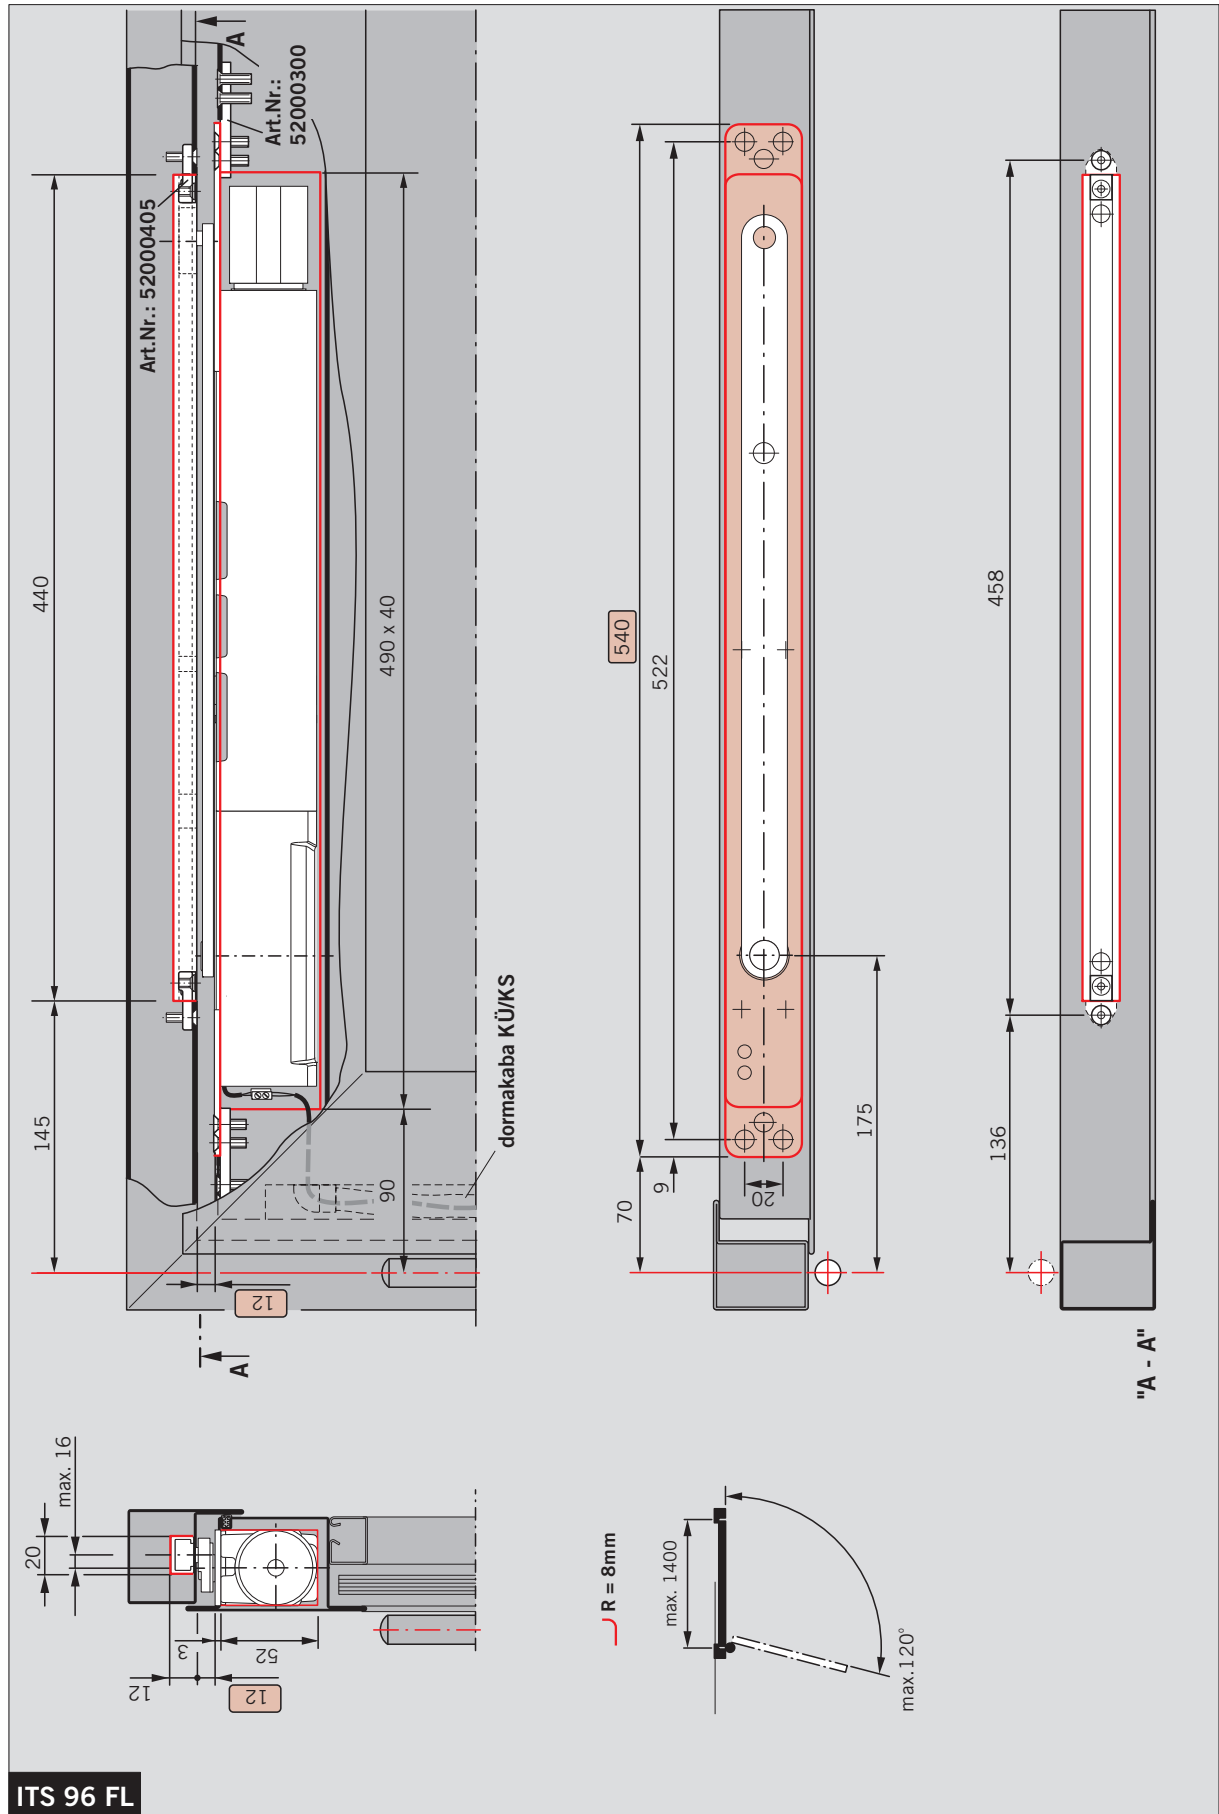







ITS 96 FL

ITS 96 / ITS 96 FL
+ G 96 N 20

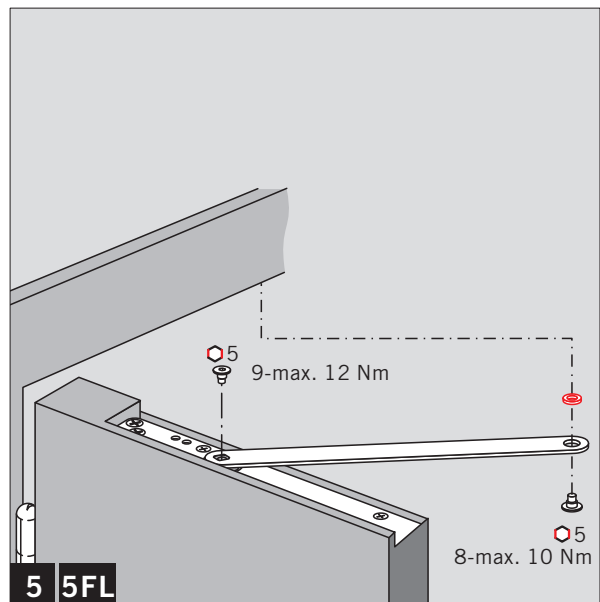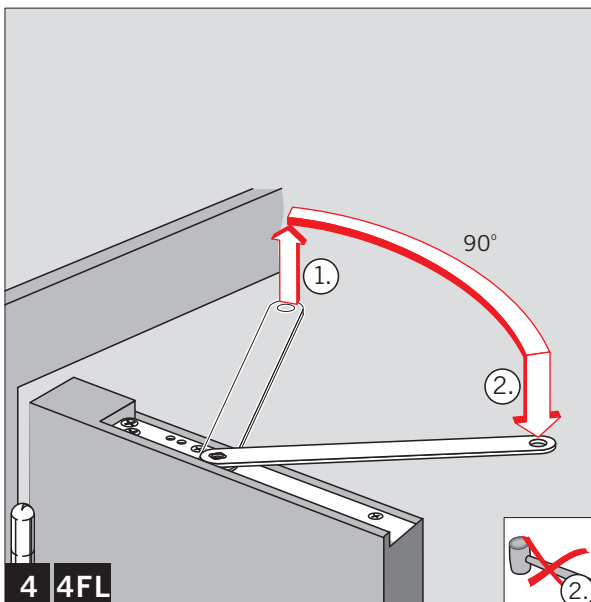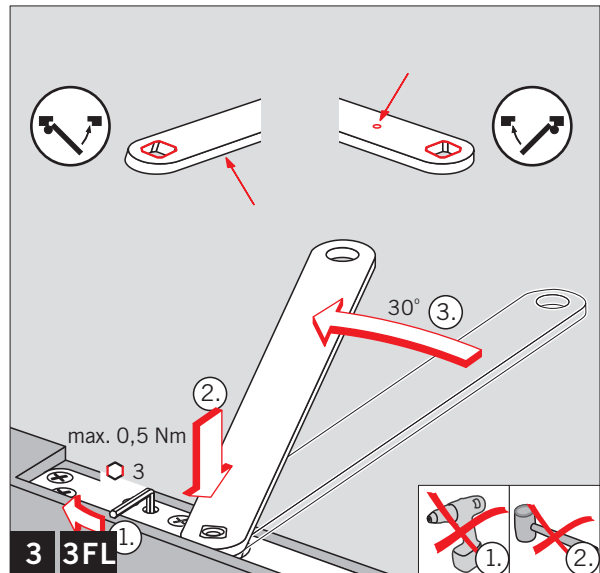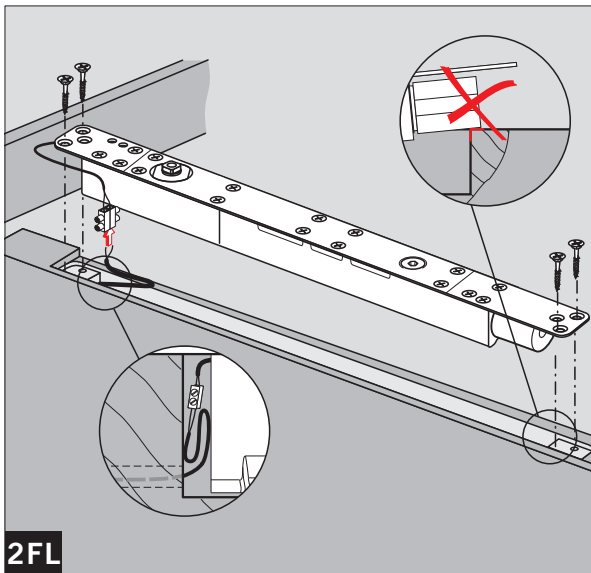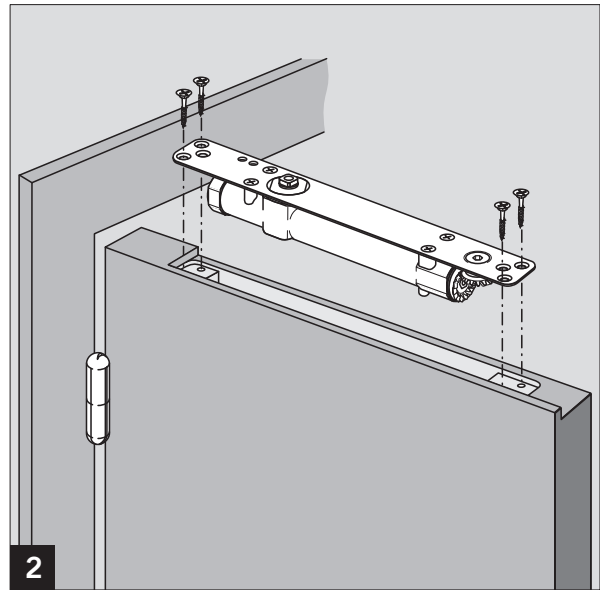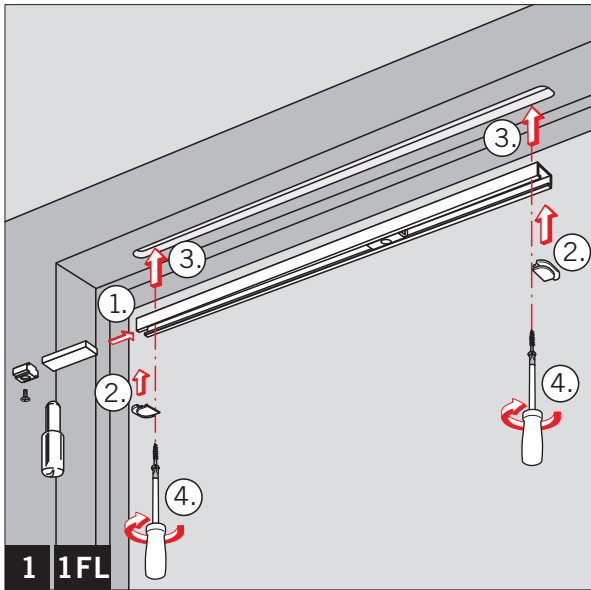

ITS 96 / ITS 96 FL

+ G 96 N 20

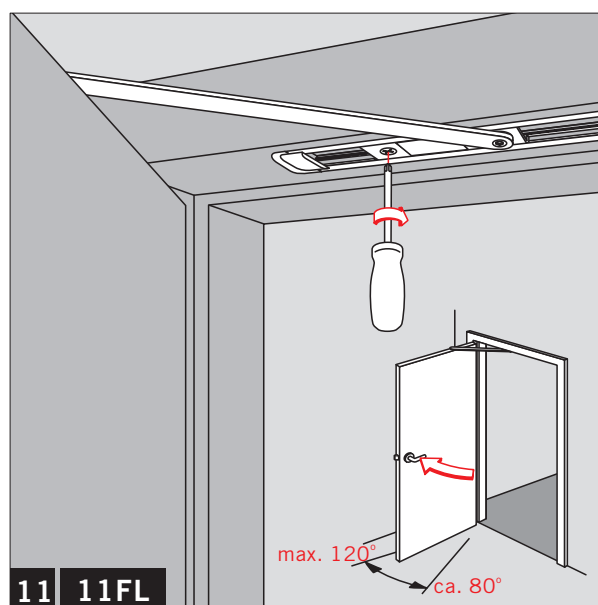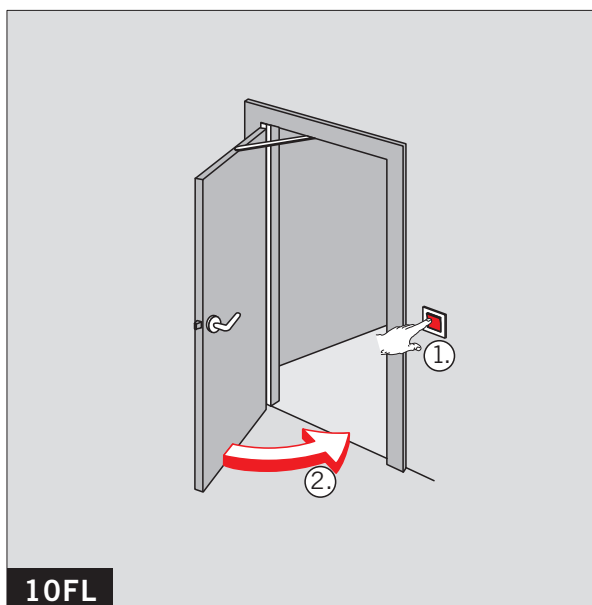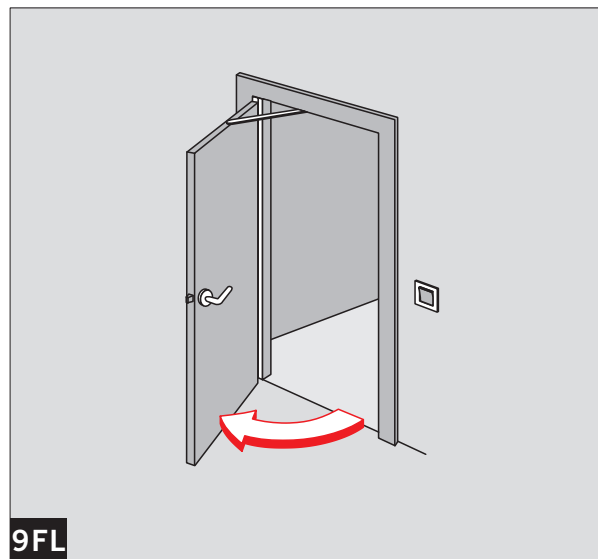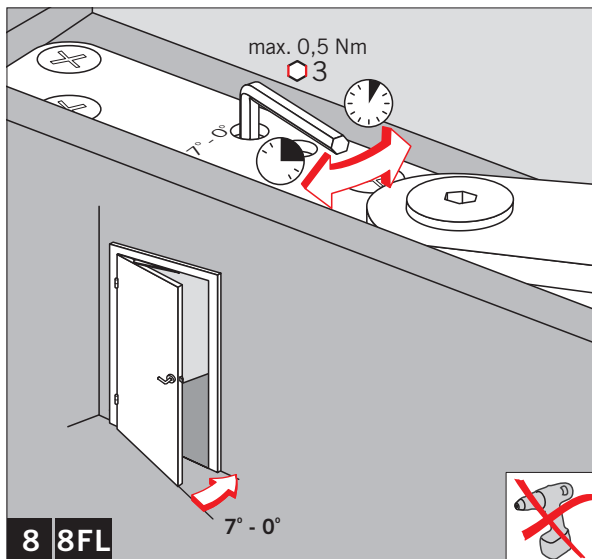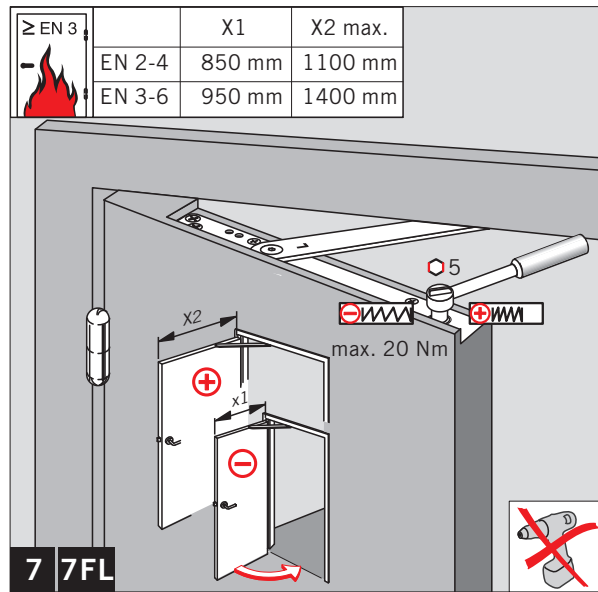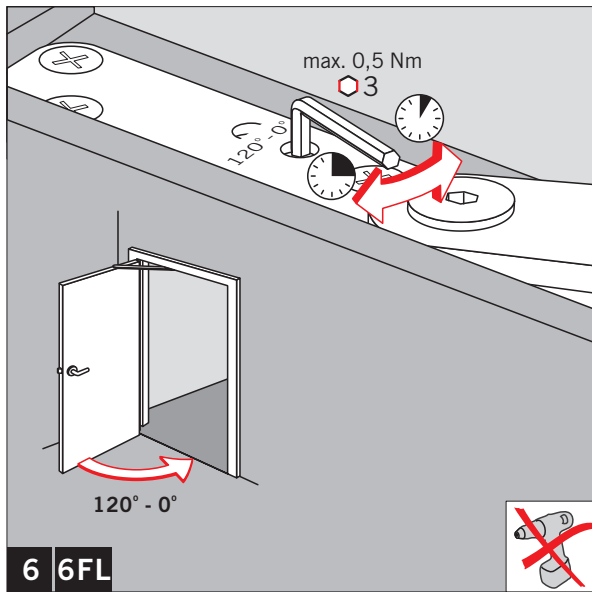

Änderungen vorbehalten
Subject to change without notice