


# ITS 96 EN 2-4 / EN 3-6 + G 96 EMF

Montageanleitung / mounting instructions

WN 055971 45532, 02/20  
14/715

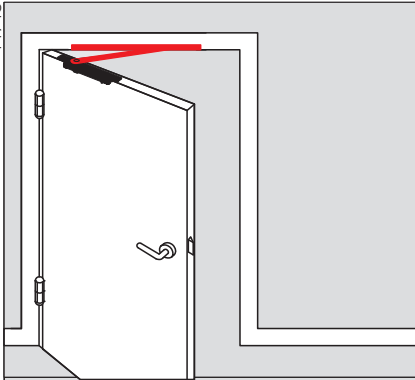

**G 96 EMF**  
DIN L 52 00 15 01  
DIN R 52 00 16 01

**ITS 96**  
EN 2-4 52 40 01 50  
EN 3-6 52 25 01 50

**A**

**B**

**ITS 96**  
EN 2-4 52 41 01 50  
EN 3-6 52 26 01 50

**C**

**D**

**ITS 96**  
EN 2-4 52 42 01 50  
EN 3-6 52 27 01 50


**E**

**F**


	dormakaba Deutschland GmbH Postfach 4009 58 247 Ennepetal		04	
	3 8	3 8	2 4	1 1 4
0432-CPR-00026-31		EN 1154:1996+A1:2002		3 8 3-6 1 1 4
DOP_0051 / DOP_0052				

	DORMA Deutschland GmbH Postfach 4009 58 247 Ennepetal		04	
	3 8	3 8	3-5	1 1 3
0432-CPD-0025		EN 1155:1997+A1:2002		3 8 3-5 1 1 3
DOP_0098				







ITS 96 EN 2-4 / EN 3-6  
+ G 96 EMF

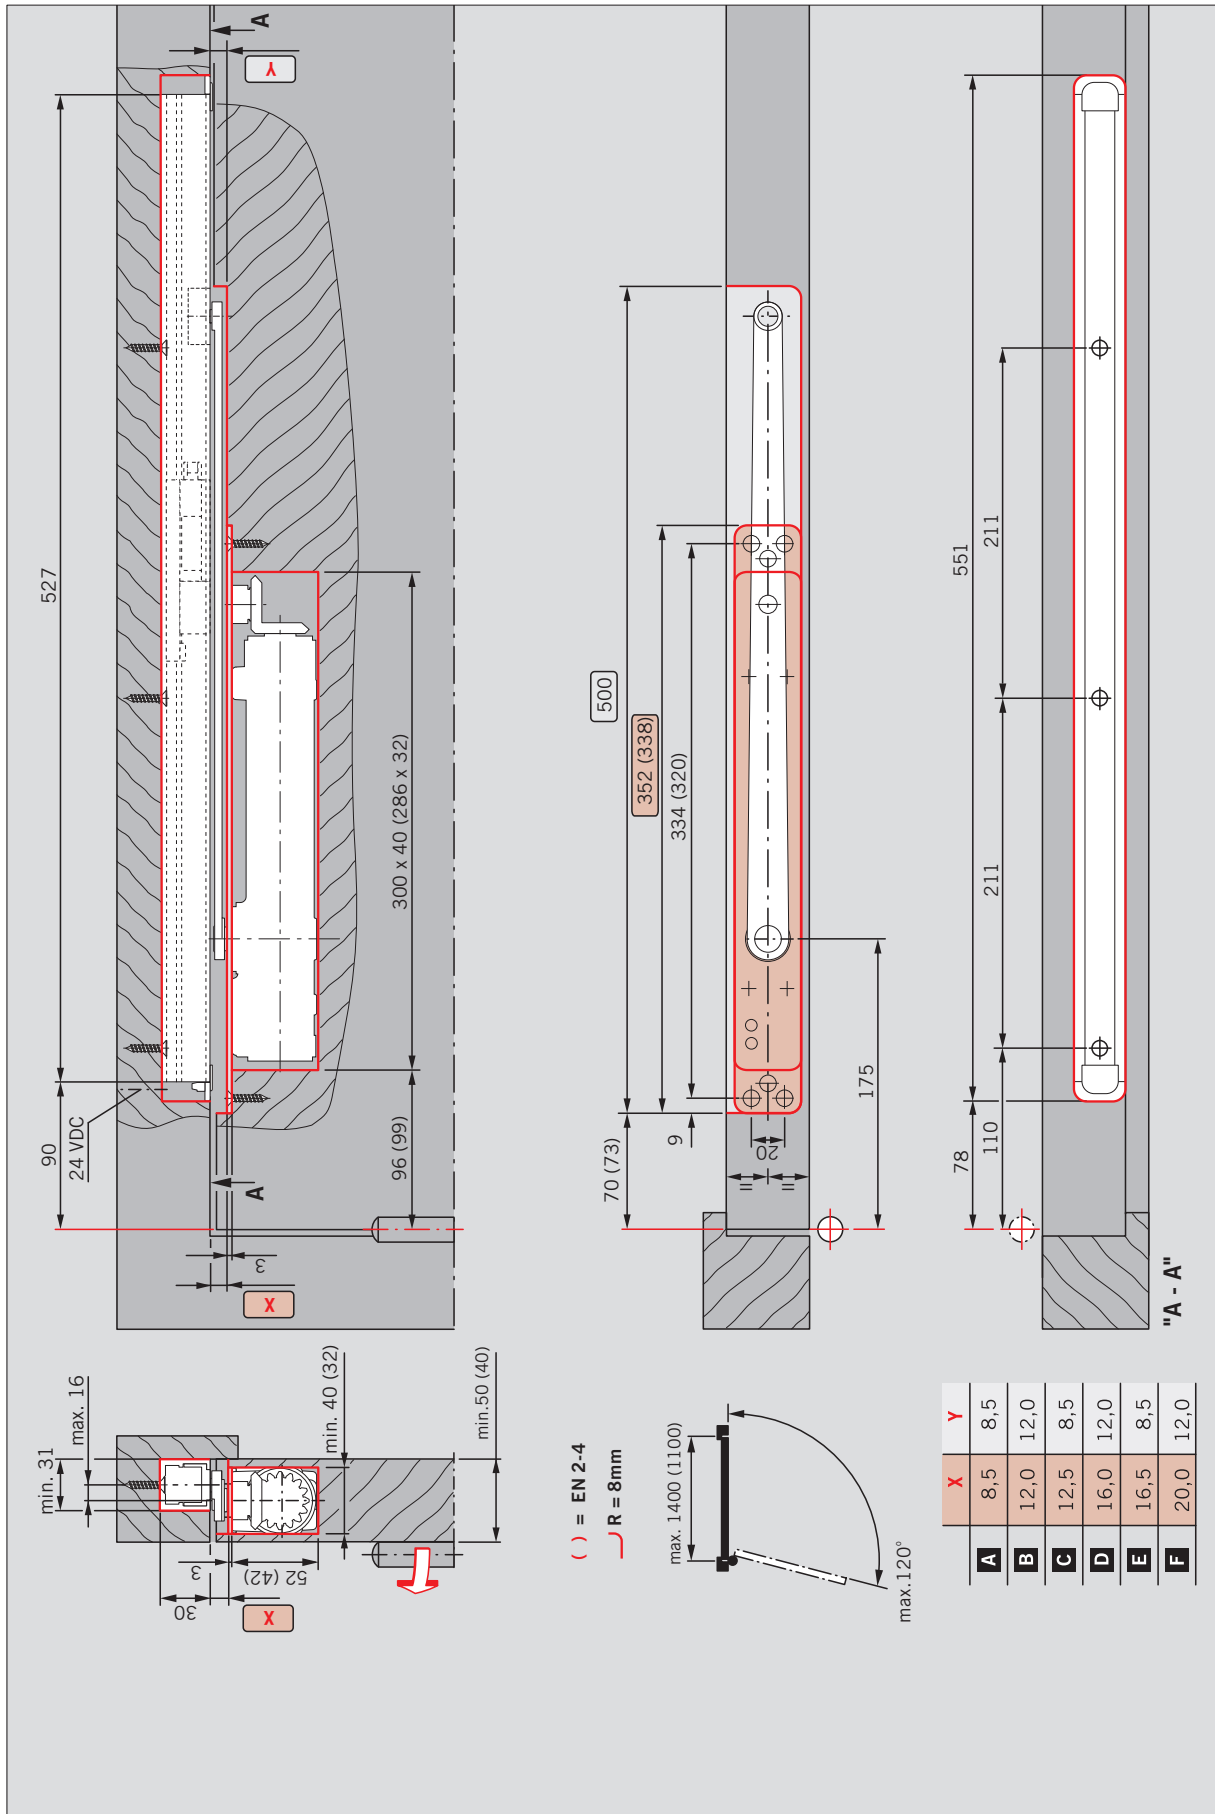






ITS 96 EN 2-4 / EN 3-6  
+ G 96 EMF

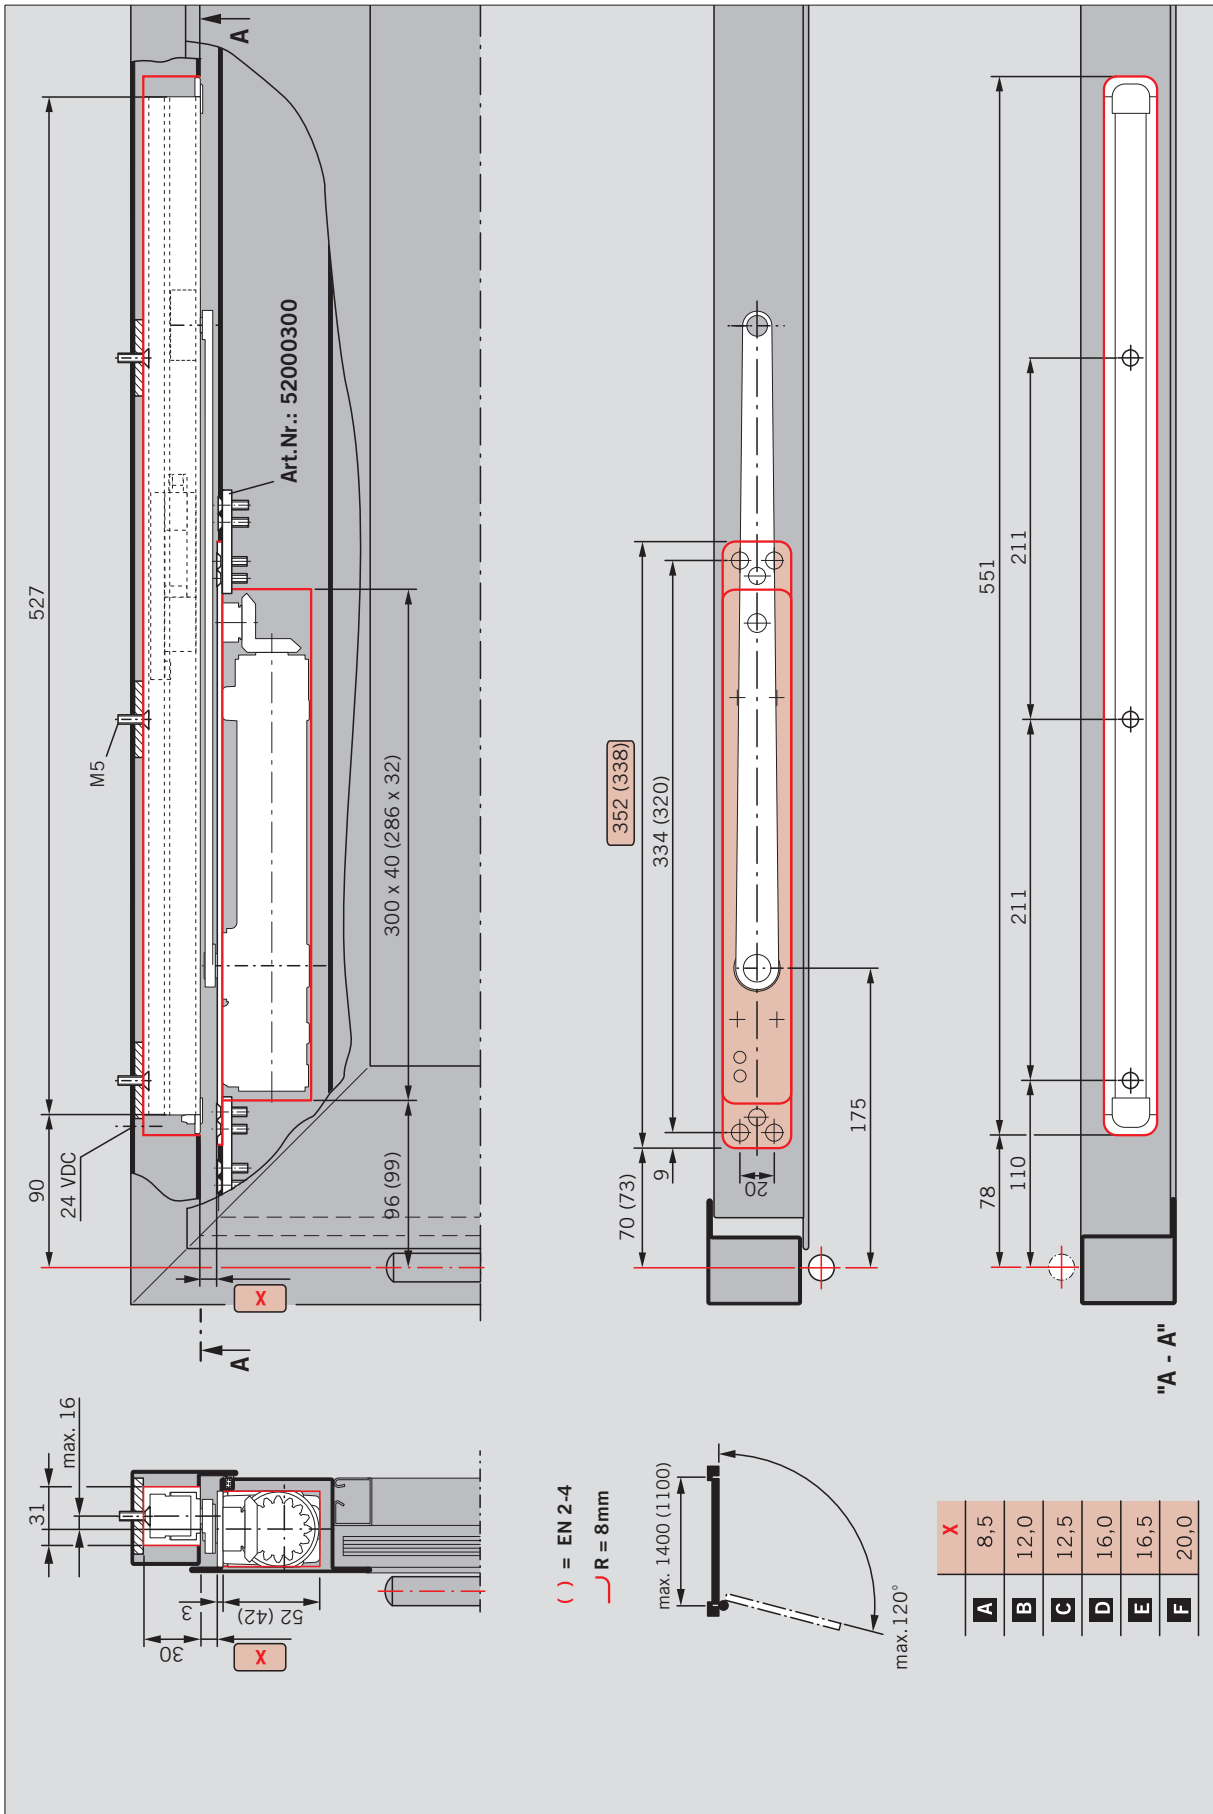

ITS 96 EN 2-4 / EN 3-6  
+ G 96 EMF

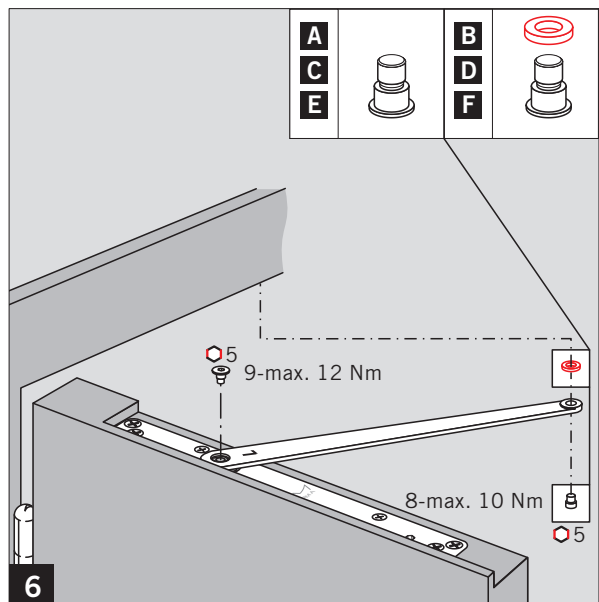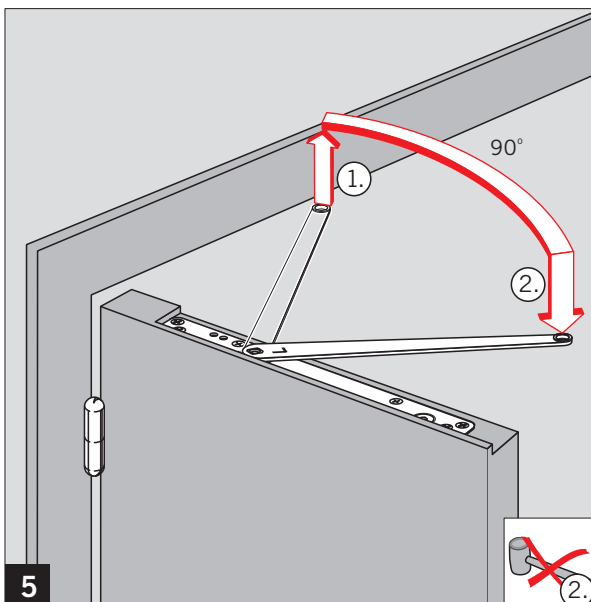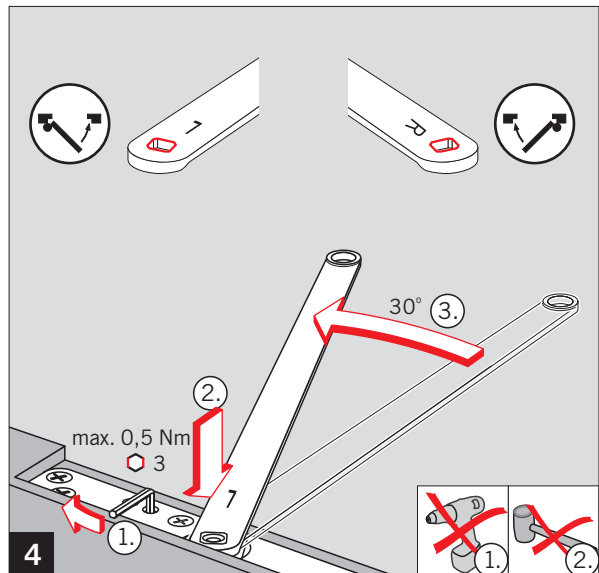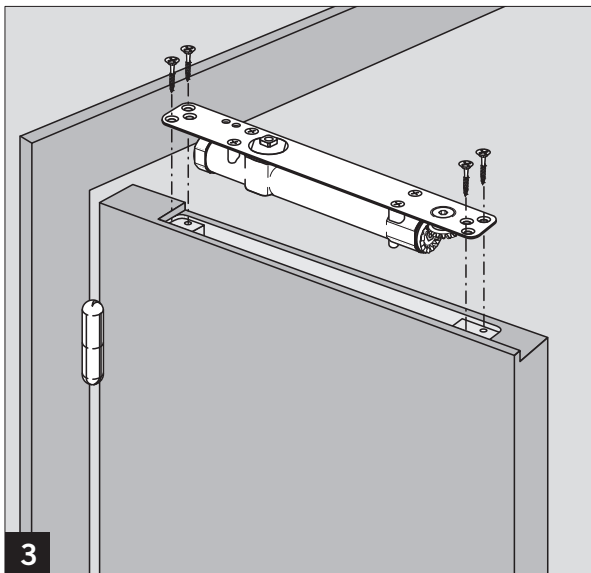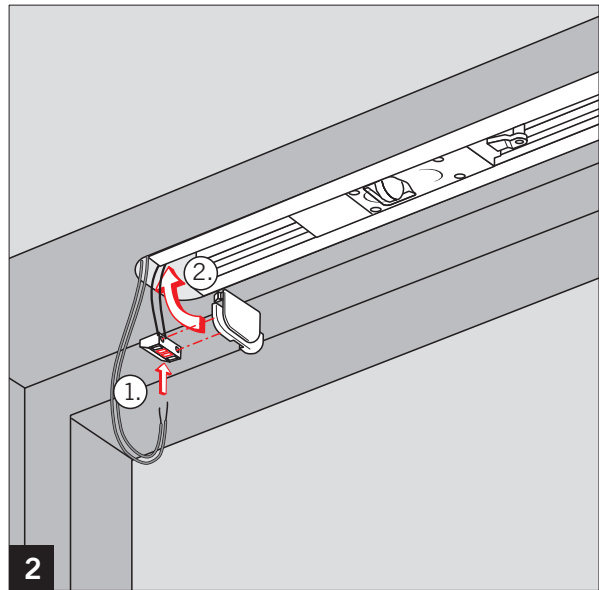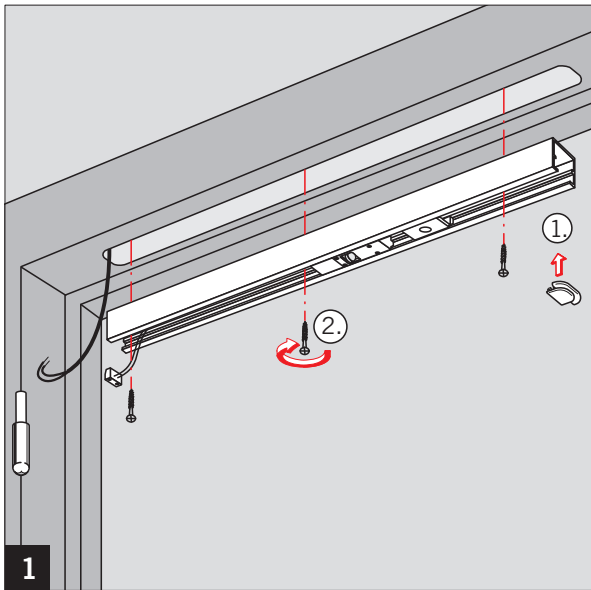

ITS 96 EN 2-4 / EN 3-6  
+ G 96 EMF

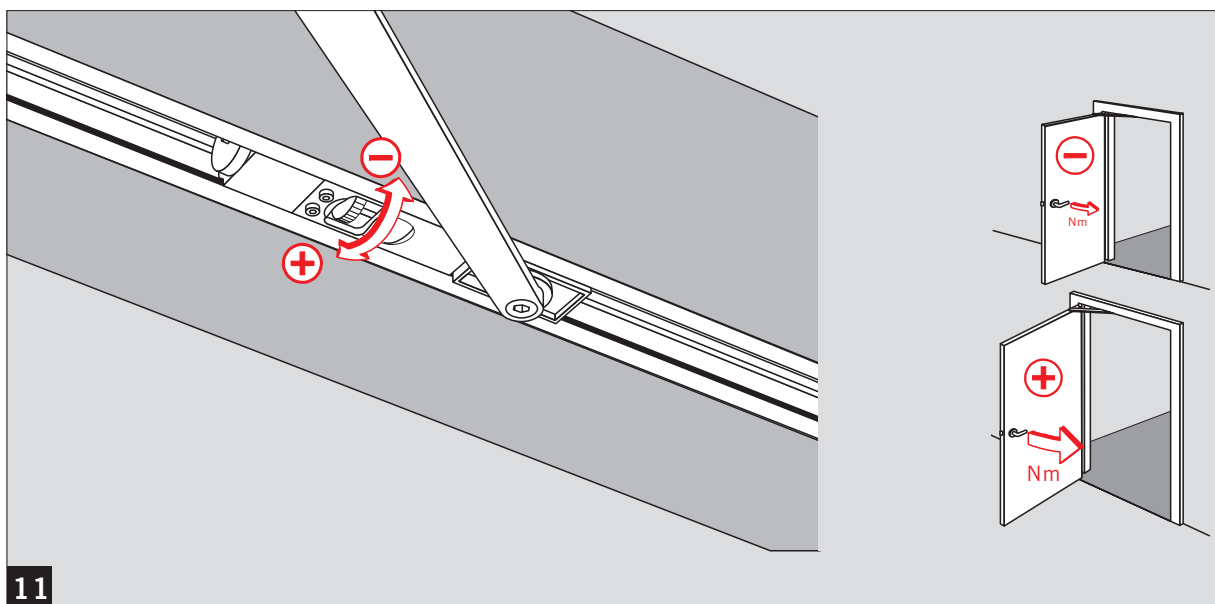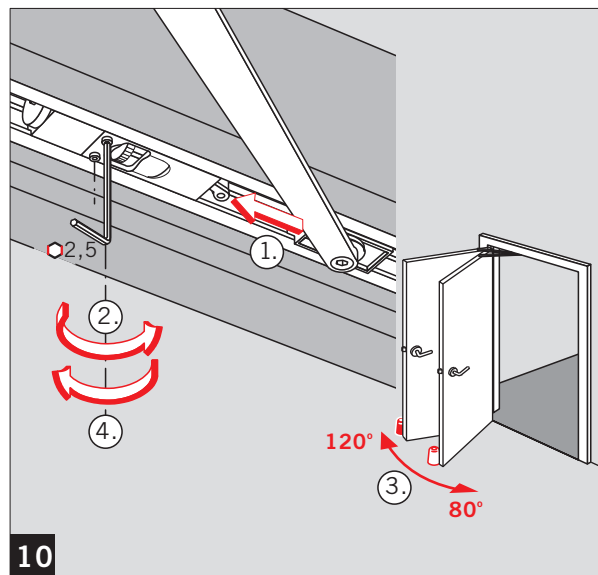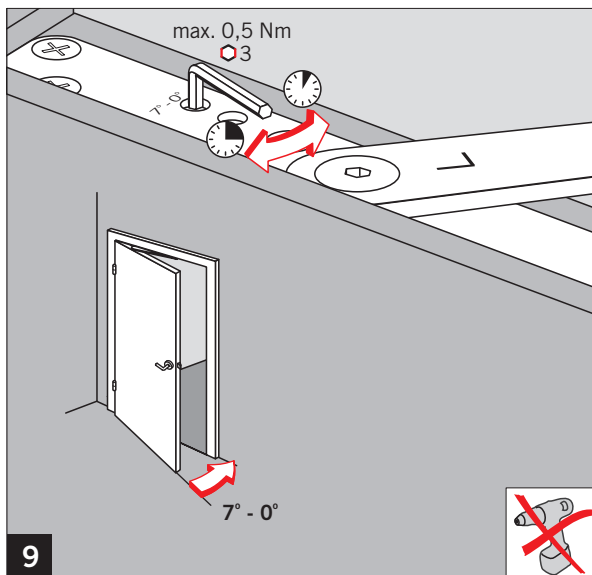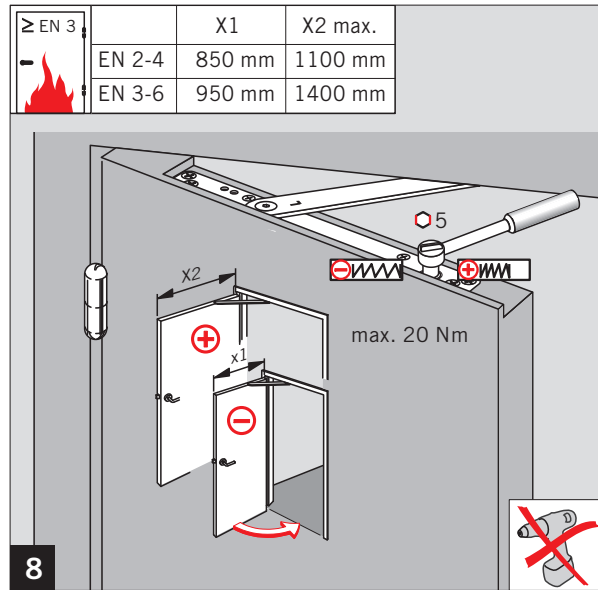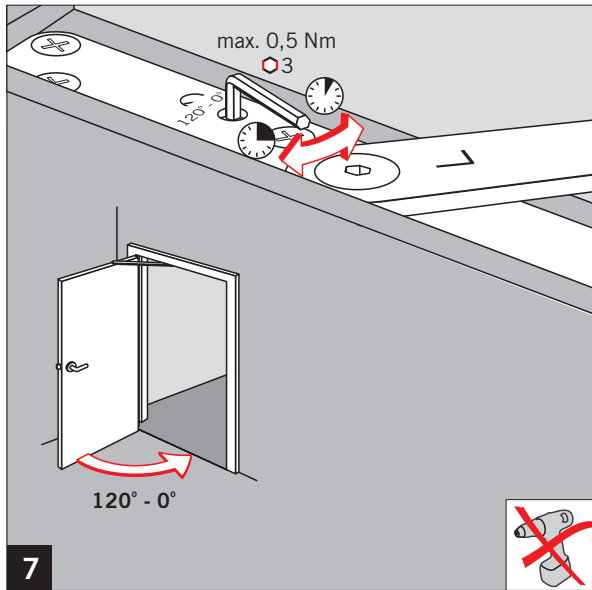

ITS 96 EN 2-4 / EN 3-6  
+ G 96 EMF

Änderungen vorbehalten  
Subject to change without notice