

# TS 99 FLR-K EN 2-5






## Montageanleitung / mounting instructions

WN 059018 45532, 03/18






CE	0432-CPD-0037	DOP_0068	dormakaba Deutschland GmbH			04		
			DORMA Platz 1 D-58 256 Ennepetal			3	8	1
			EN 1155:1997+A1:2002			3	8	3-5




CE	0432-CPD-0189	DOP_0068	dormakaba Deutschland GmbH			13		
			DORMA Platz 1 D-58 256 Ennepetal			4	8	2-5
			EN 1154:1996+A1:2002			4	8	2-5




CE	DIN EN 14637:2008-01	DOP_0068	dormakaba Deutschland GmbH			1		
			DORMA Platz 1 D-58 256 Ennepetal			3	8	1
			DIN EN 14637:2008-01			3	8	1

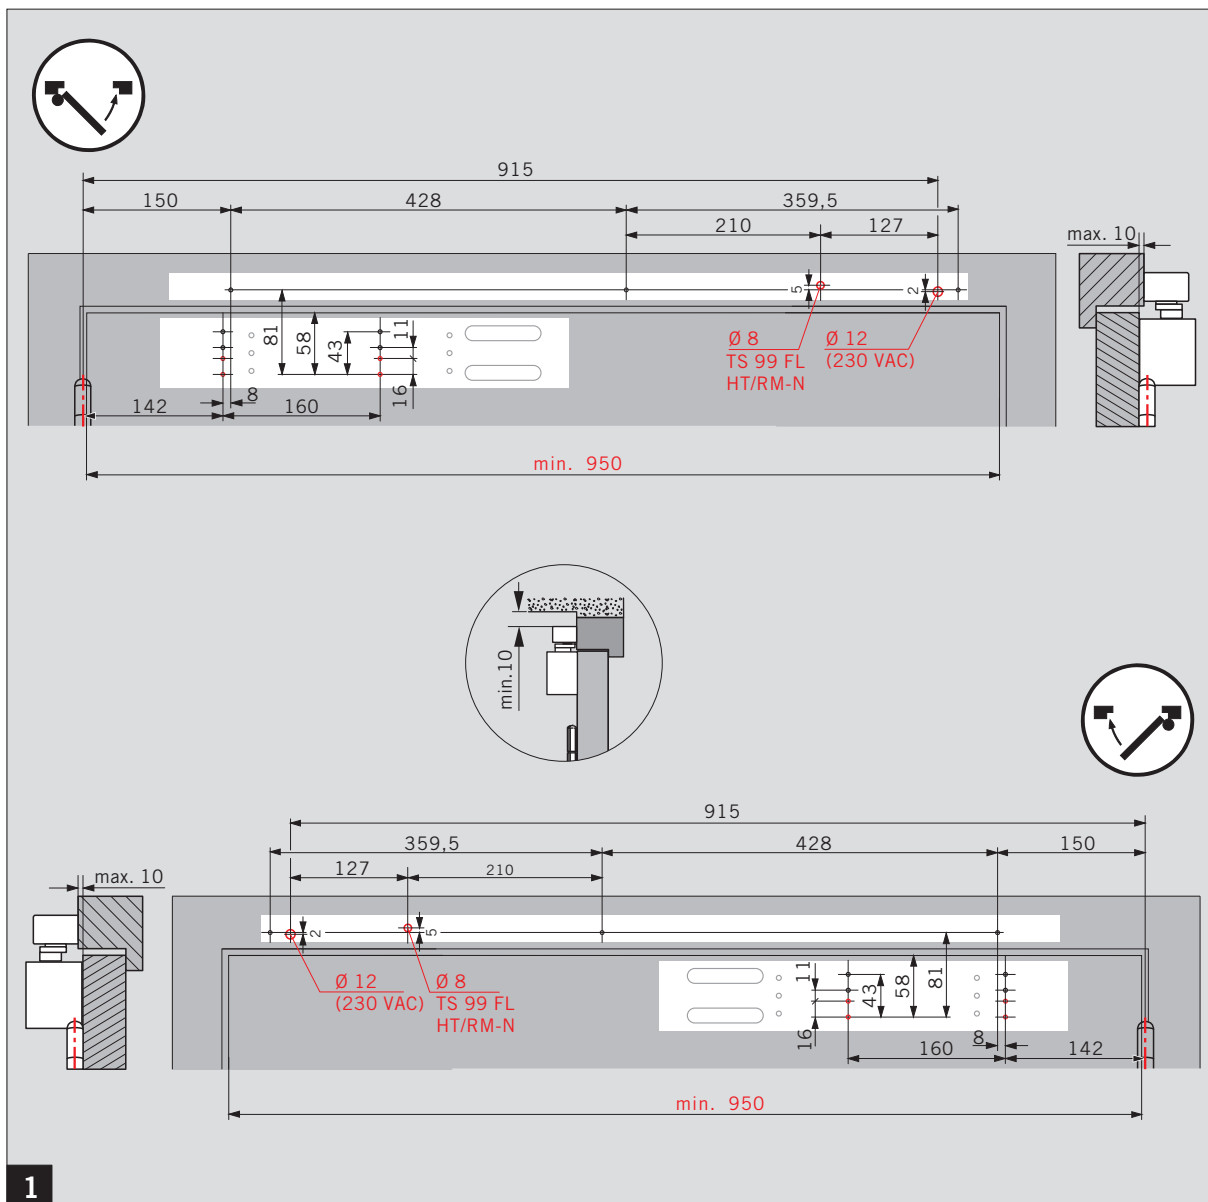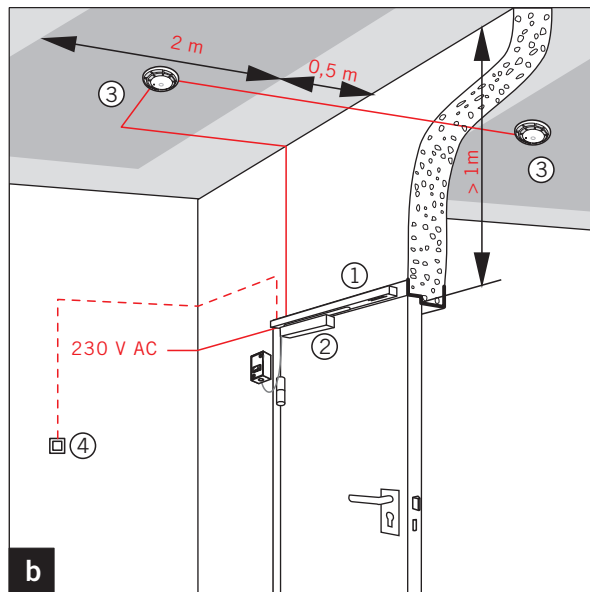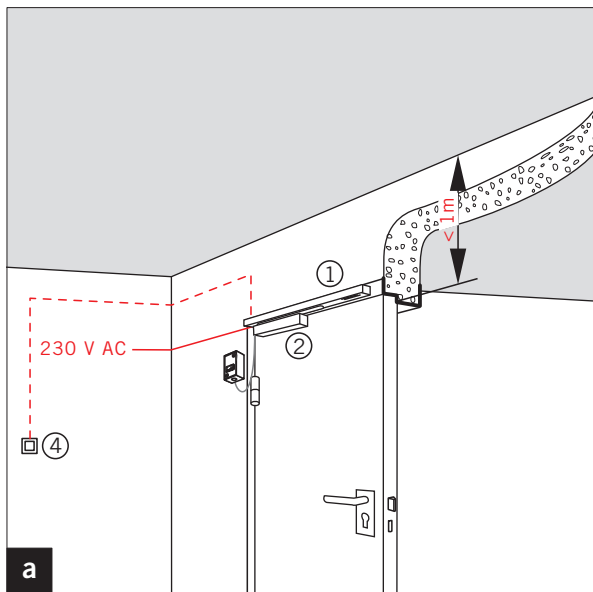







1

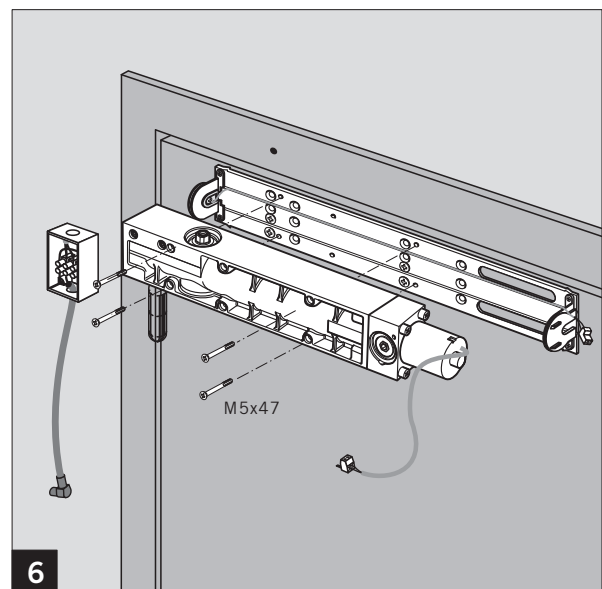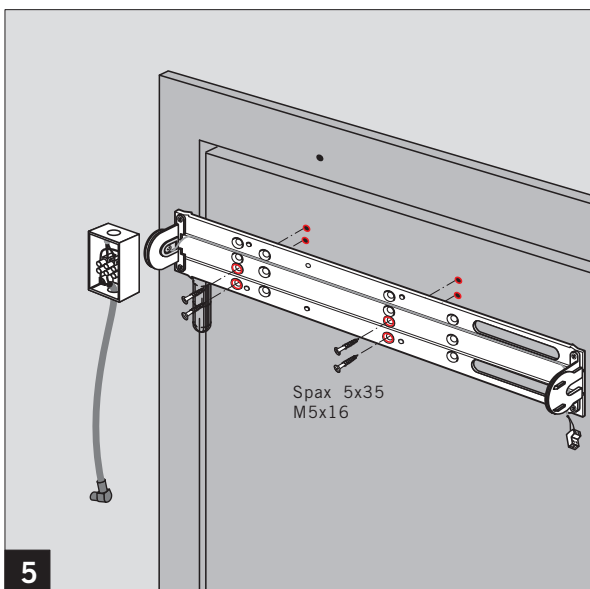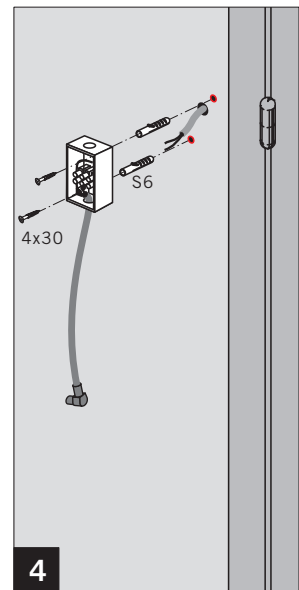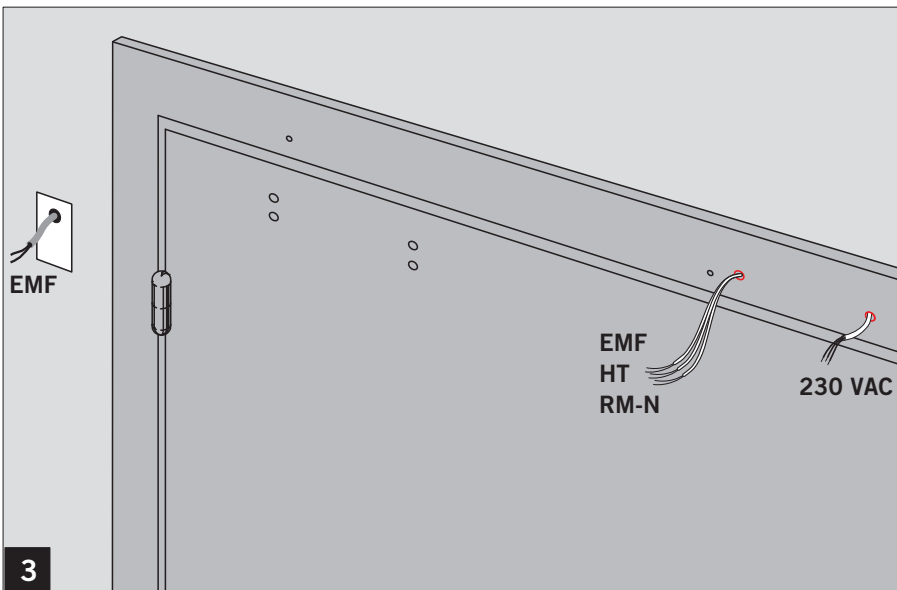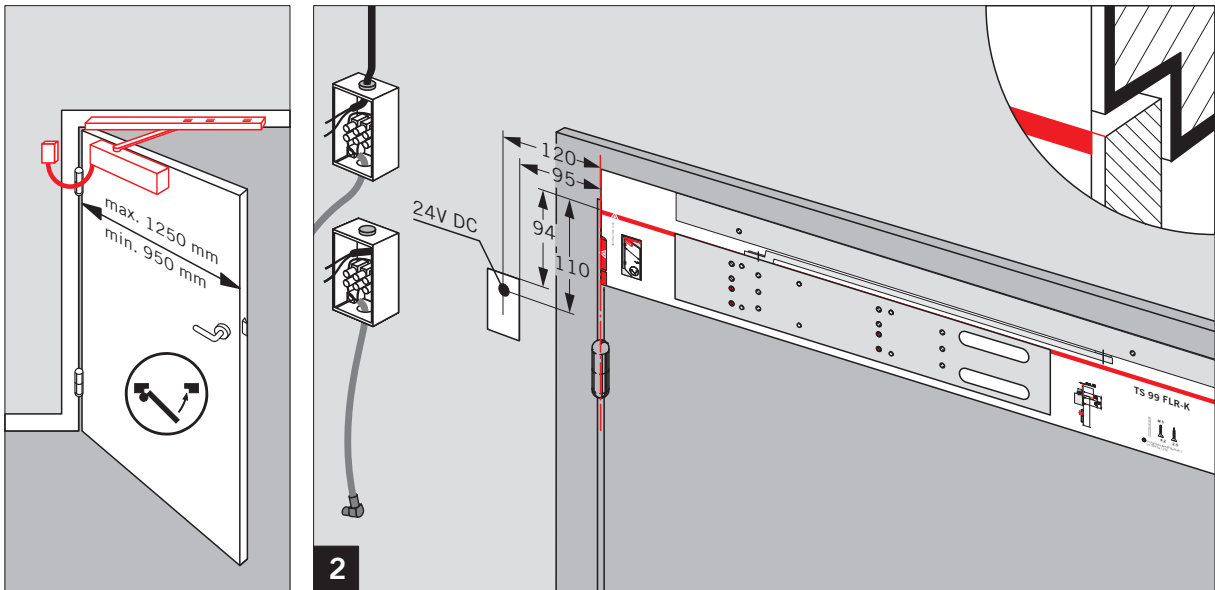


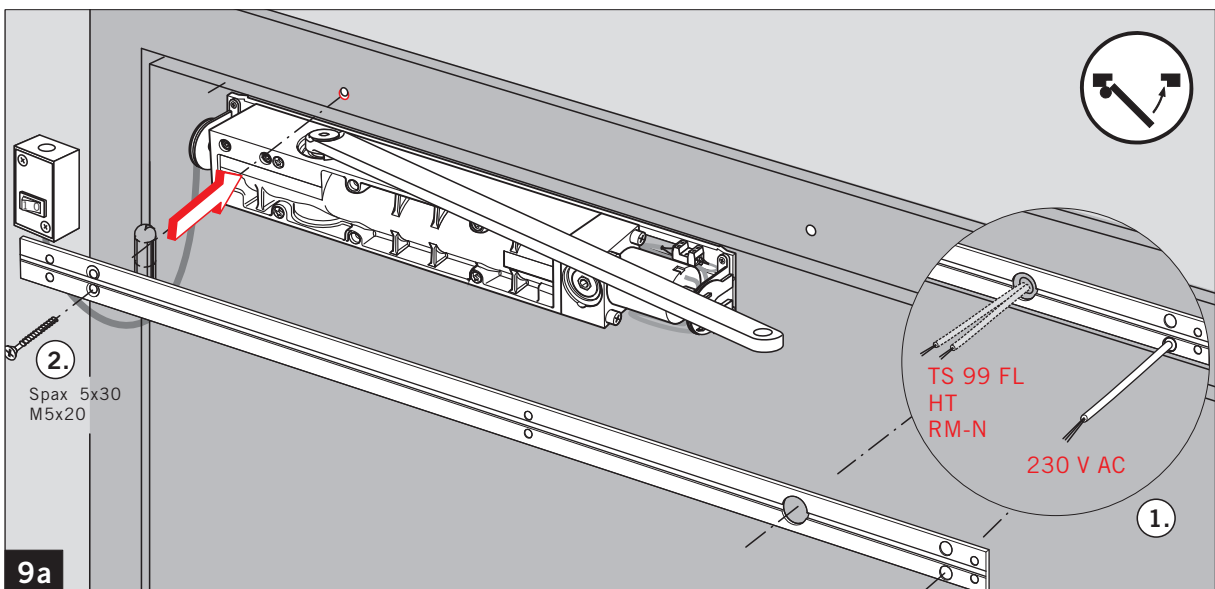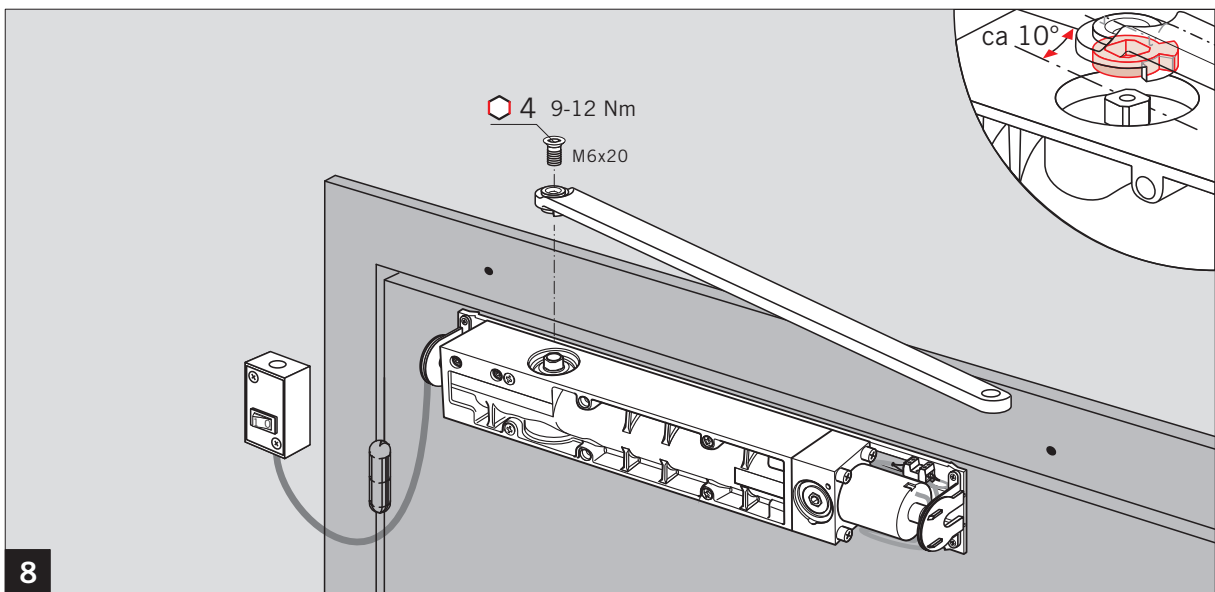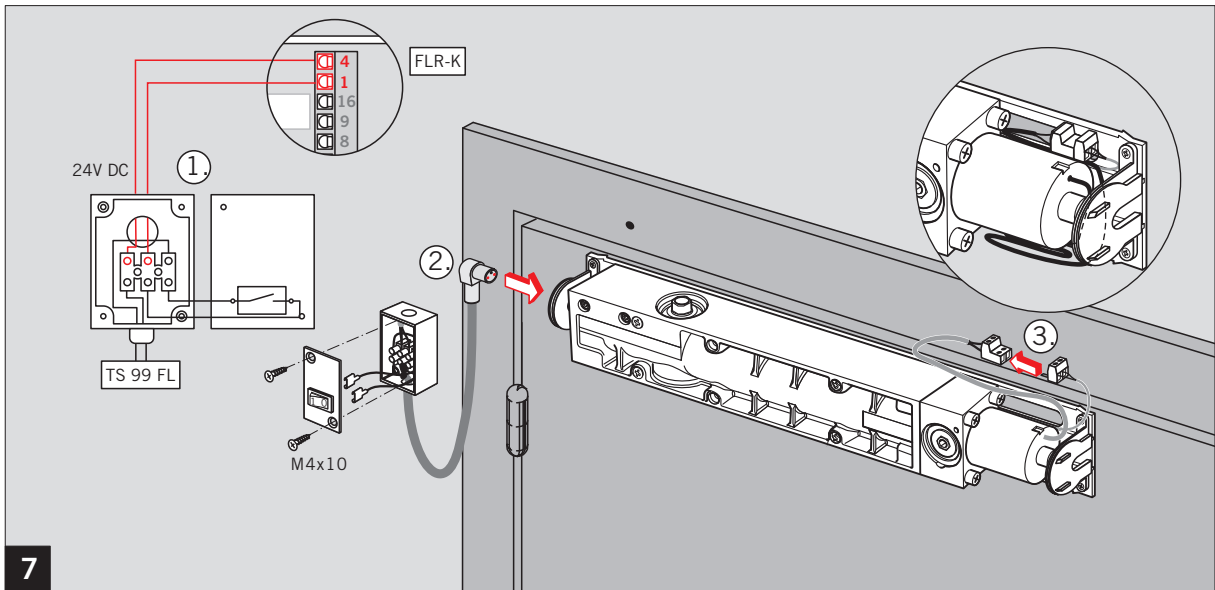

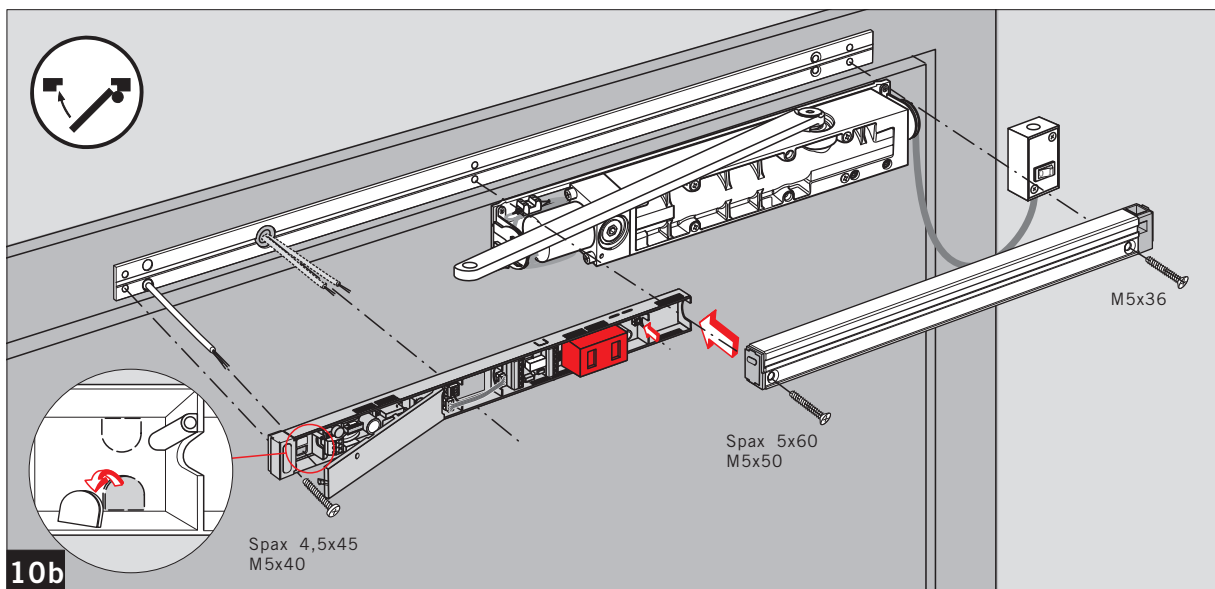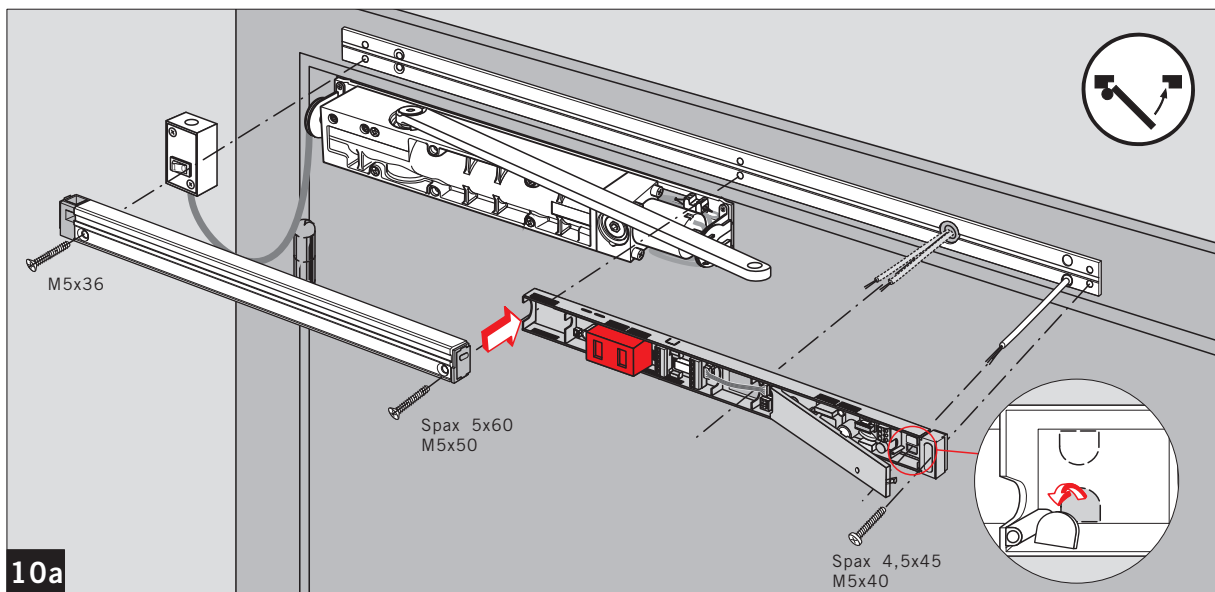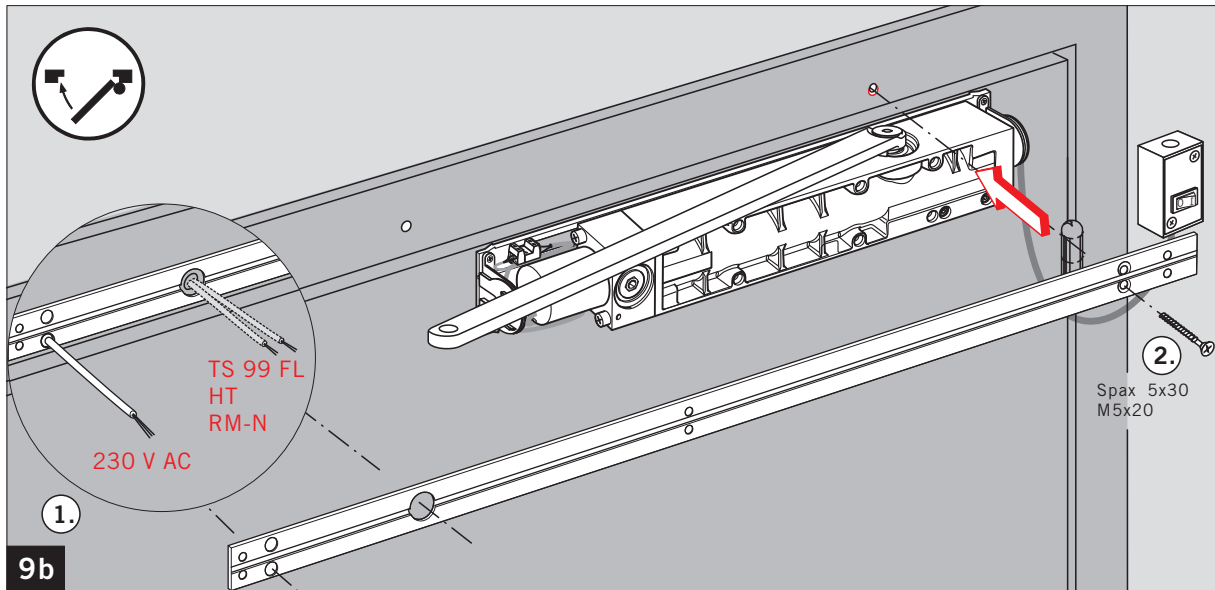


# TS 99 FLR-K EN 2-5

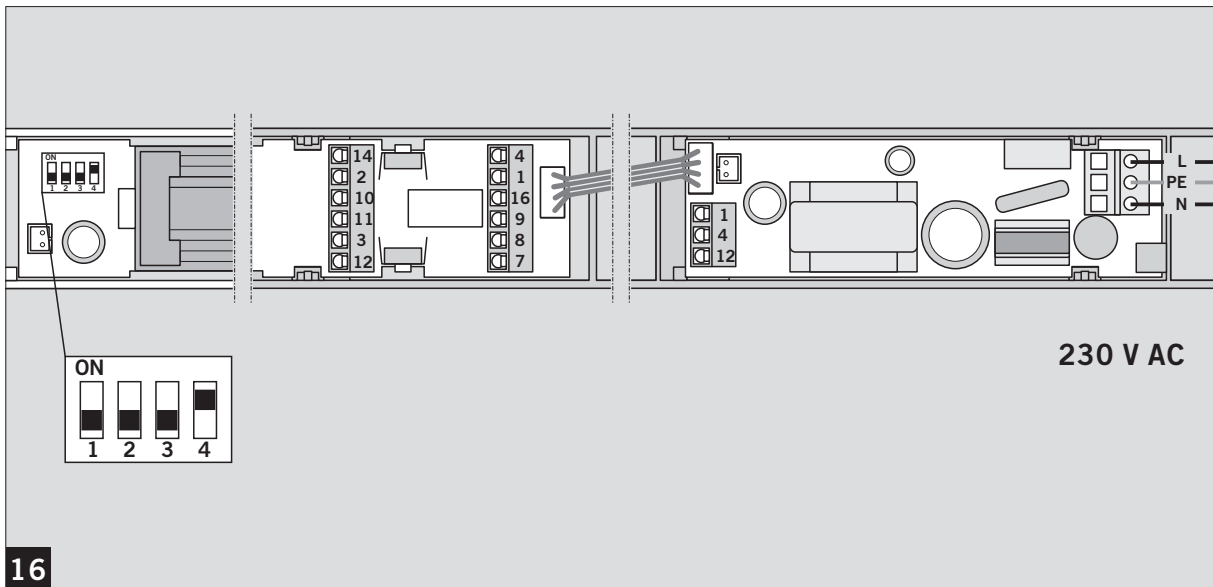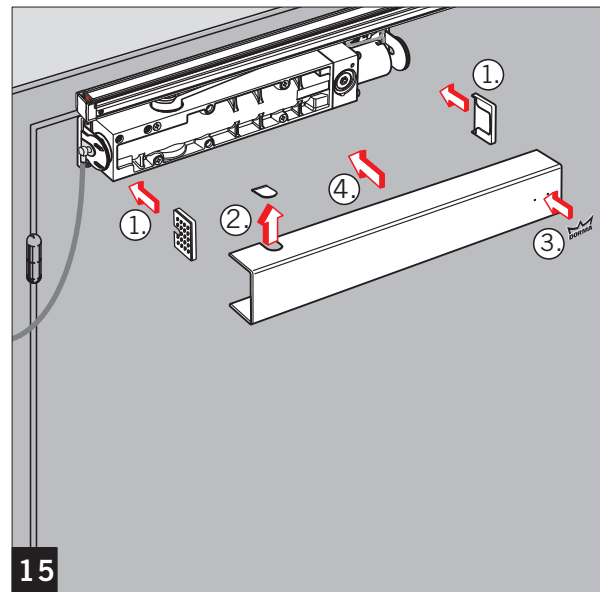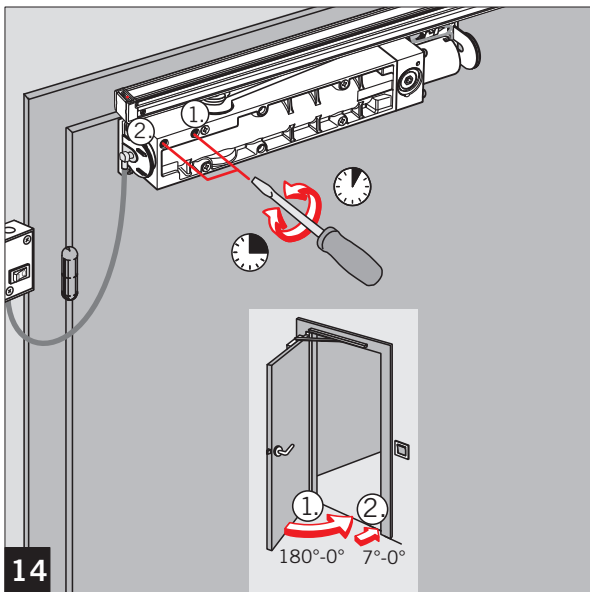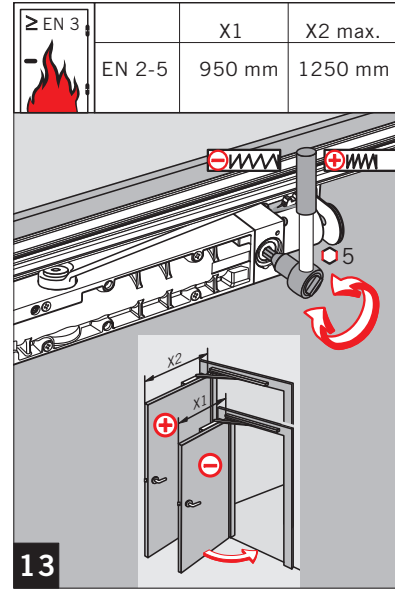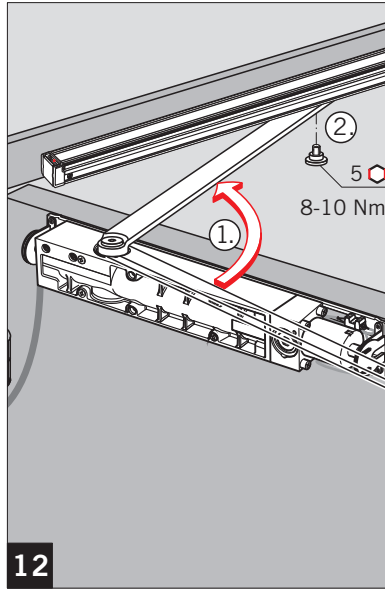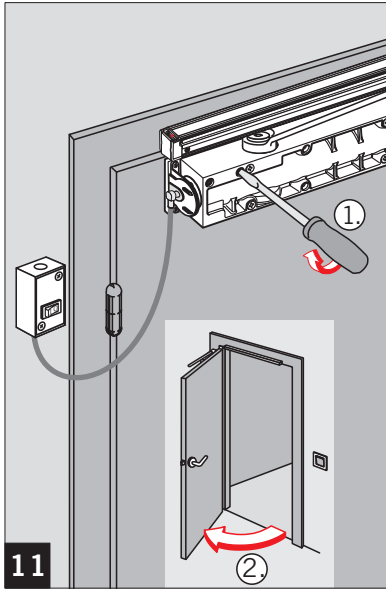


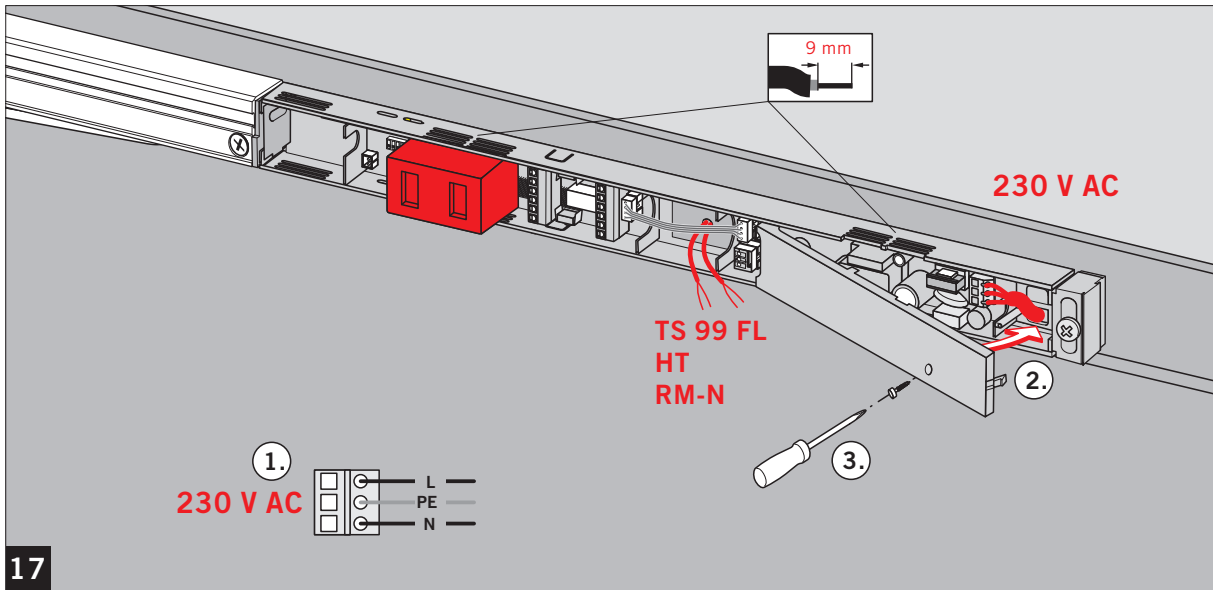

17

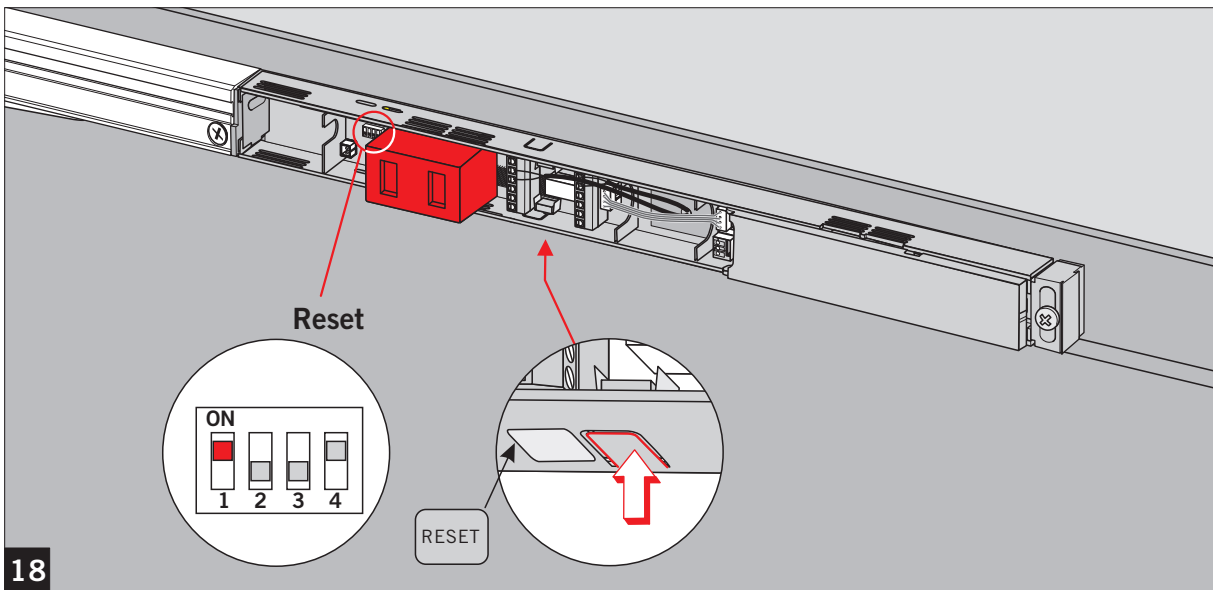

18

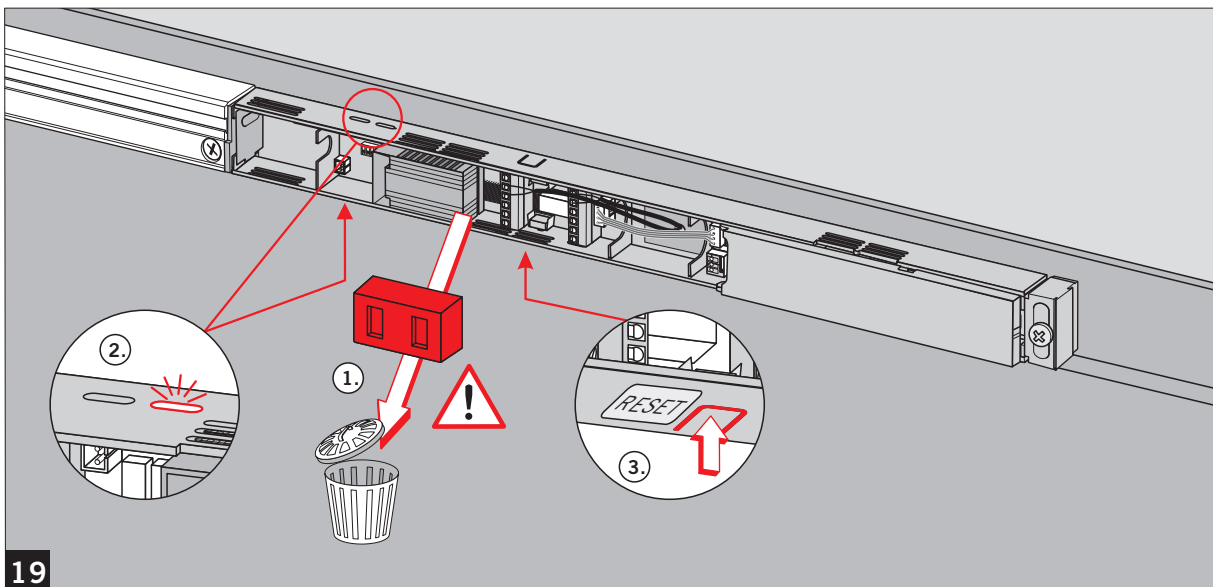

19

