


# Installation Instructions

## Rim Cylinder Mounting Kit with 8000 Series Device

dormakaba 80R20SC Rim Cylinder & 80CK Mounting kit supplied with "03" trims. Cylinder tail piece will have to be cut to length.

1. Lay out parts included in kit.
2. Insert rim cylinder thru trim plate as shown.
3. Slide cylinder cup over cylinder as shown.
4. Insert tabs of cylinder cup into locking holes of trim plate.
5. Attach cylinder and cup using screws supplied with cylinder.
6. Measure and verify door thickness.
7. Trim tail piece if required. (Tail piece should be 1/8" - 3/16" less than thickness of door. (Measure from back of trim plate to tip of tail piece.
8. Install trim assembly to chassis using (2) screws packaged with exit device.
9. Refer to proper exit device installation instructions to complete installation.

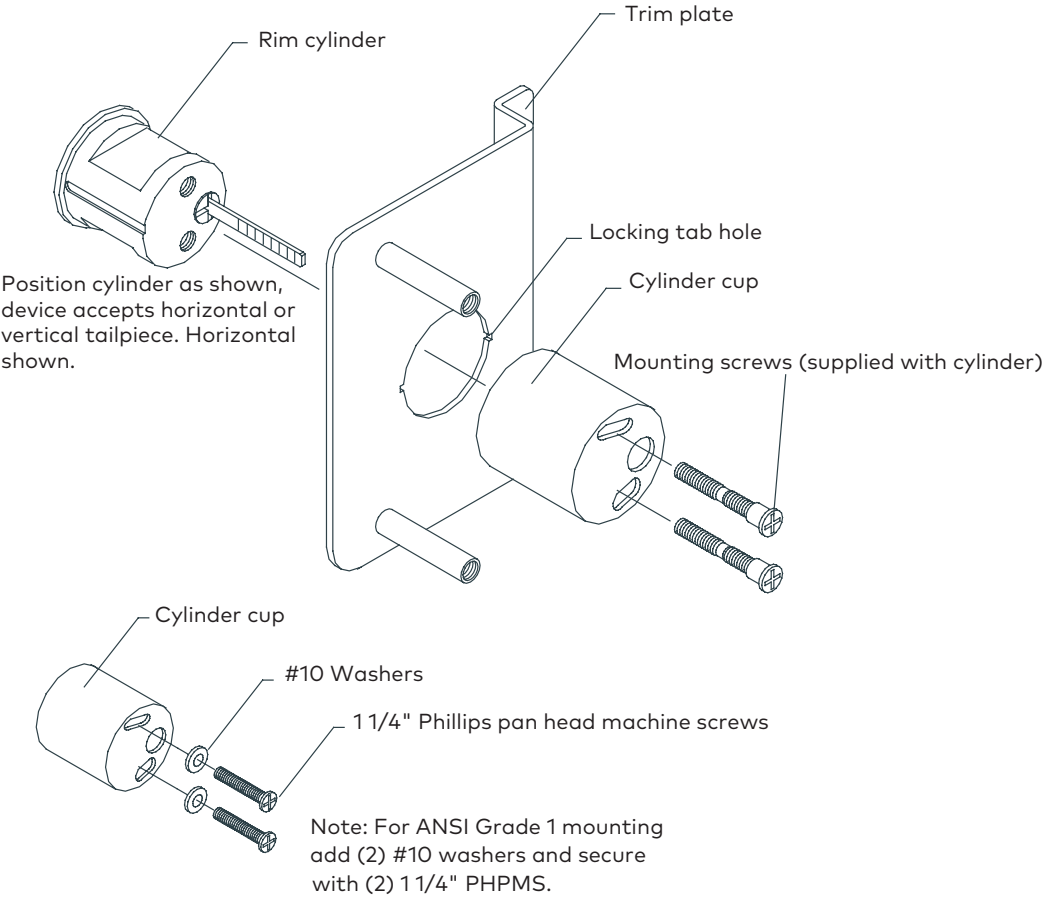

# Instructions (continued)

dormakaba 80R20SC Rim cylinder & 80CK Mounting kit supplied with "03" trims. Cylinder tail piece will have to be cut to length.

1. Lay out parts included in kit.
2. Insert rim cylinder thru trim plate as shown.
3. Slide cylinder cup over cylinder as shown.
4. Insert tabs of cylinder cup into locking holes of trim plate.
5. Attach cylinder and cup using screws supplied with cylinder.
6. Measure and verify door thickness.
7. Trim tail piece as required. Approximately 1/8" - 3/16" more than door thickness.
8. Install trim assembly to chassis using screws packaged with exit device.
9. Refer to proper exit device installation instructions to complete installation.

