

NOTES:


1. DIMENSIONS ARE IN INCHES/[MM].
2. DO NOT SCALE DRAWING.
3. FOR #12 FHWS, USE 9/64" (.140") DRILL.
4. FOR #12-24 FHMS, USE #16 (.177") DRILL & TAP.

DOOR CUT-OUTS AS INDICATED UNDER DOOR DETAIL.  
FRAME FOR STRIKE SHOWN UNDER LOCK DETAIL.

**WOOD DOORS**  
M9961



DORMA Architectural Hardware  
Reamstown, PA 17567

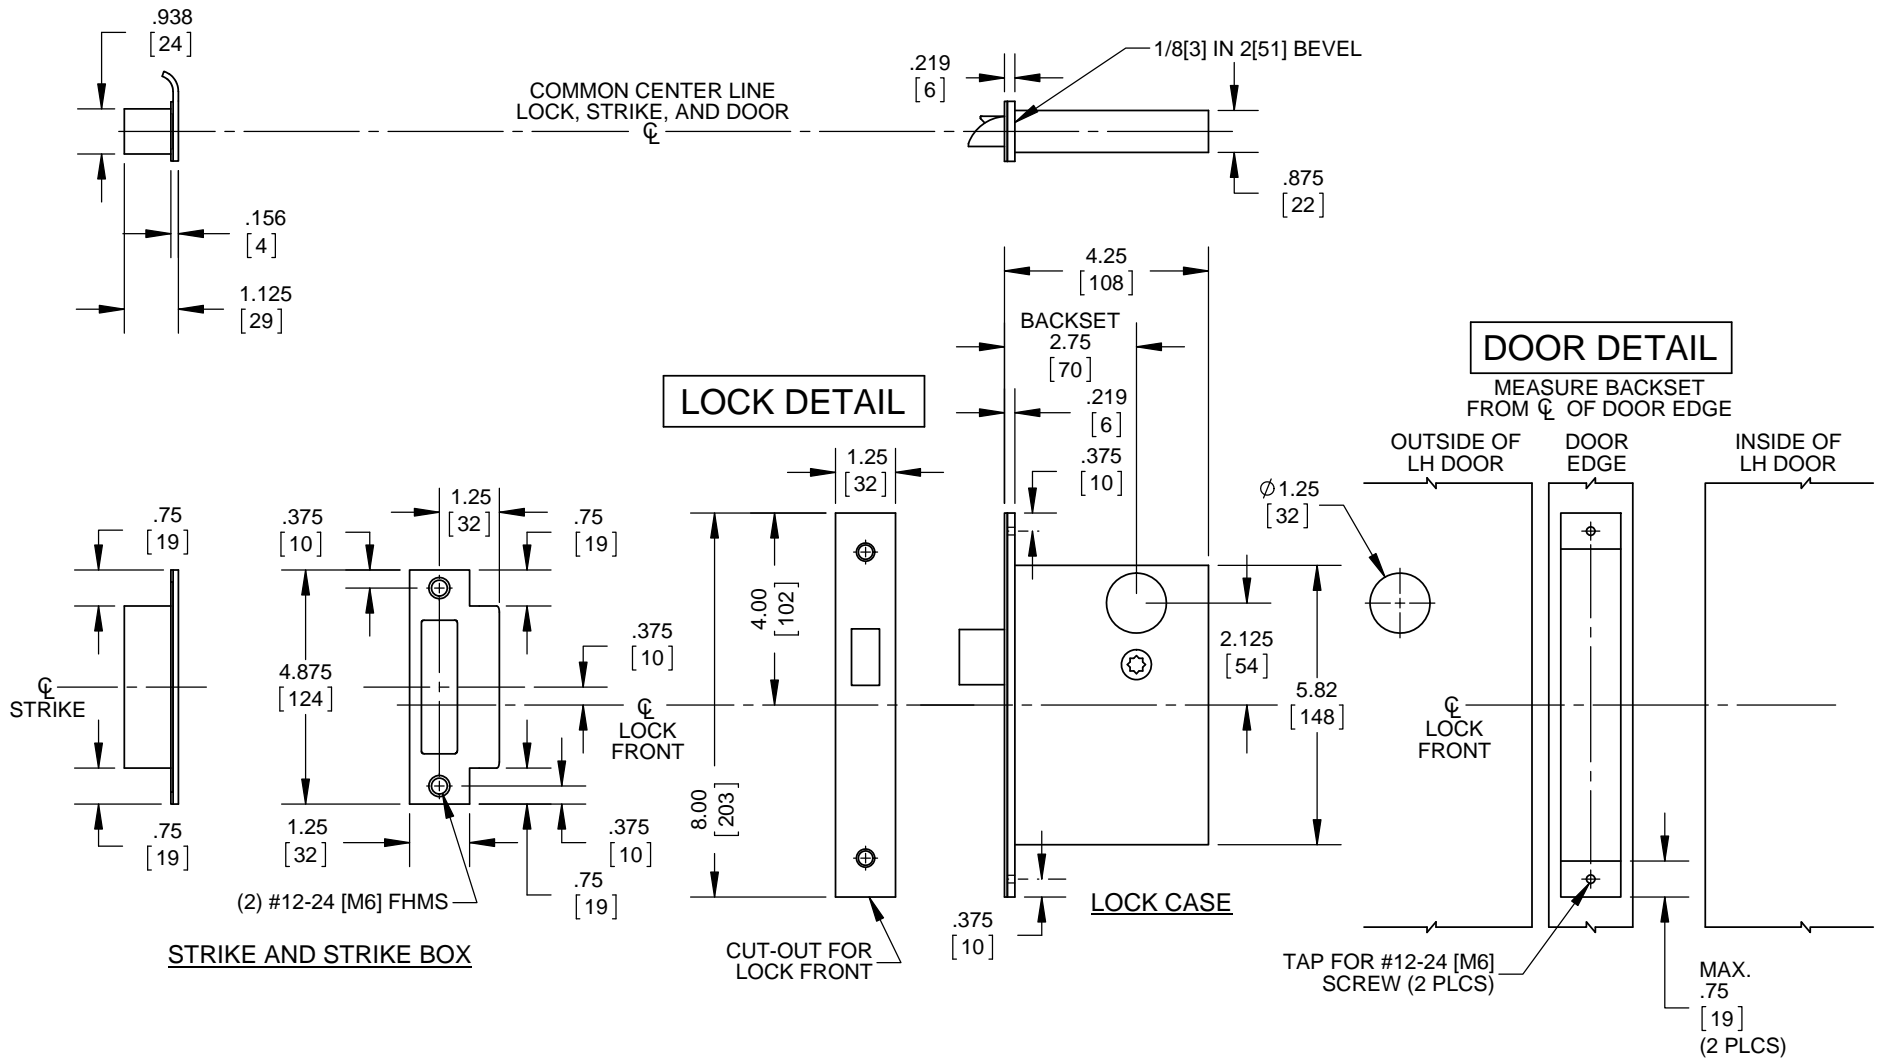

- NOTES:  
1. DIMENSIONS ARE IN INCHES/[MM].  
2. DO NOT SCALE DRAWING.

DOOR CUT-OUTS AS INDICATED UNDER DOOR DETAIL.  
FRAME FOR STRIKE SHOWN UNDER LOCK DETAIL.

**STEEL DOORS**  
M9961



DORMA Architectural Hardware  
Reamstown, PA 17567