


DORMAKABA INSTRUCTIONS

USE THESE INSTRUCTIONS WHEN INSTALLING ES62(LM) or ES62F(LM) WITH ANY OF THESE DORMAKABA RIM EXIT MODELS

- 9300 / F9300
- 9700 / F9700

dormakaba
ES62 TEMPLATE
SURFACE MOUNTED RIM STRIKE

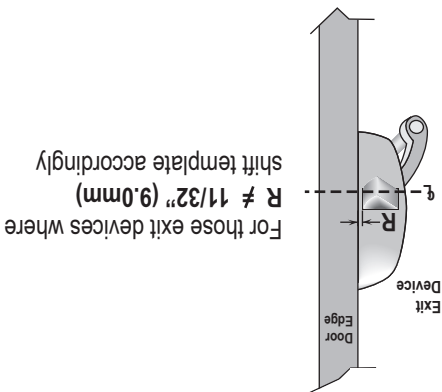

- Use these instructions when installing an ES62(LM) rim strike with rim exit devices by others.
- INSTRUCTIONS**
1. Determine the horizontal centerline of the exit device latch and transfer centerline to the frame stop.
 2. Position the template onto the frame aligning with centerline and against the closed door. Center-punch the two mounting holes and the wire access hole(s) as shown.
 3. Drill and tap the two mounting holes and drill the wire access hole(s).
 4. Refer to the 08281180 install sheet for wiring and final installation.
- For those exit devices where R # 11/32" (9.0mm) shift template accordingly

