


NOTES:  
1. DO NOT SCALE DRAWING.  
2. DIMENSIONS ARE IN INCHES/(MM).



Always consult Dorma's web site for latest template at [www.dorma-usa.com](http://www.dorma-usa.com) or call 1-800-523-8483.

5001, 5002, 5003, 5005, 5006, 5007 STRIKES  
Wood Jamb

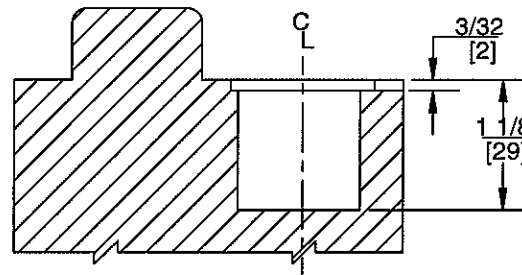


DORMA Door Controls  
Reamstown, PA 17567

TEMPLATE No. STRIKE 5001W

NOTES:

1. DO NOT SCALE DRAWING.
2. DIMENSIONS ARE IN INCHES/(MM).
3. STRIKE LOCATION ON FRAMES MUST BE ADJUSTED FOR THICKNESS OF DOOR SILENCERS WHEN USED.
4. DIMENSIONS X,Y ARE VARIABLES DEPENDING ON DOOR THICKNESS.

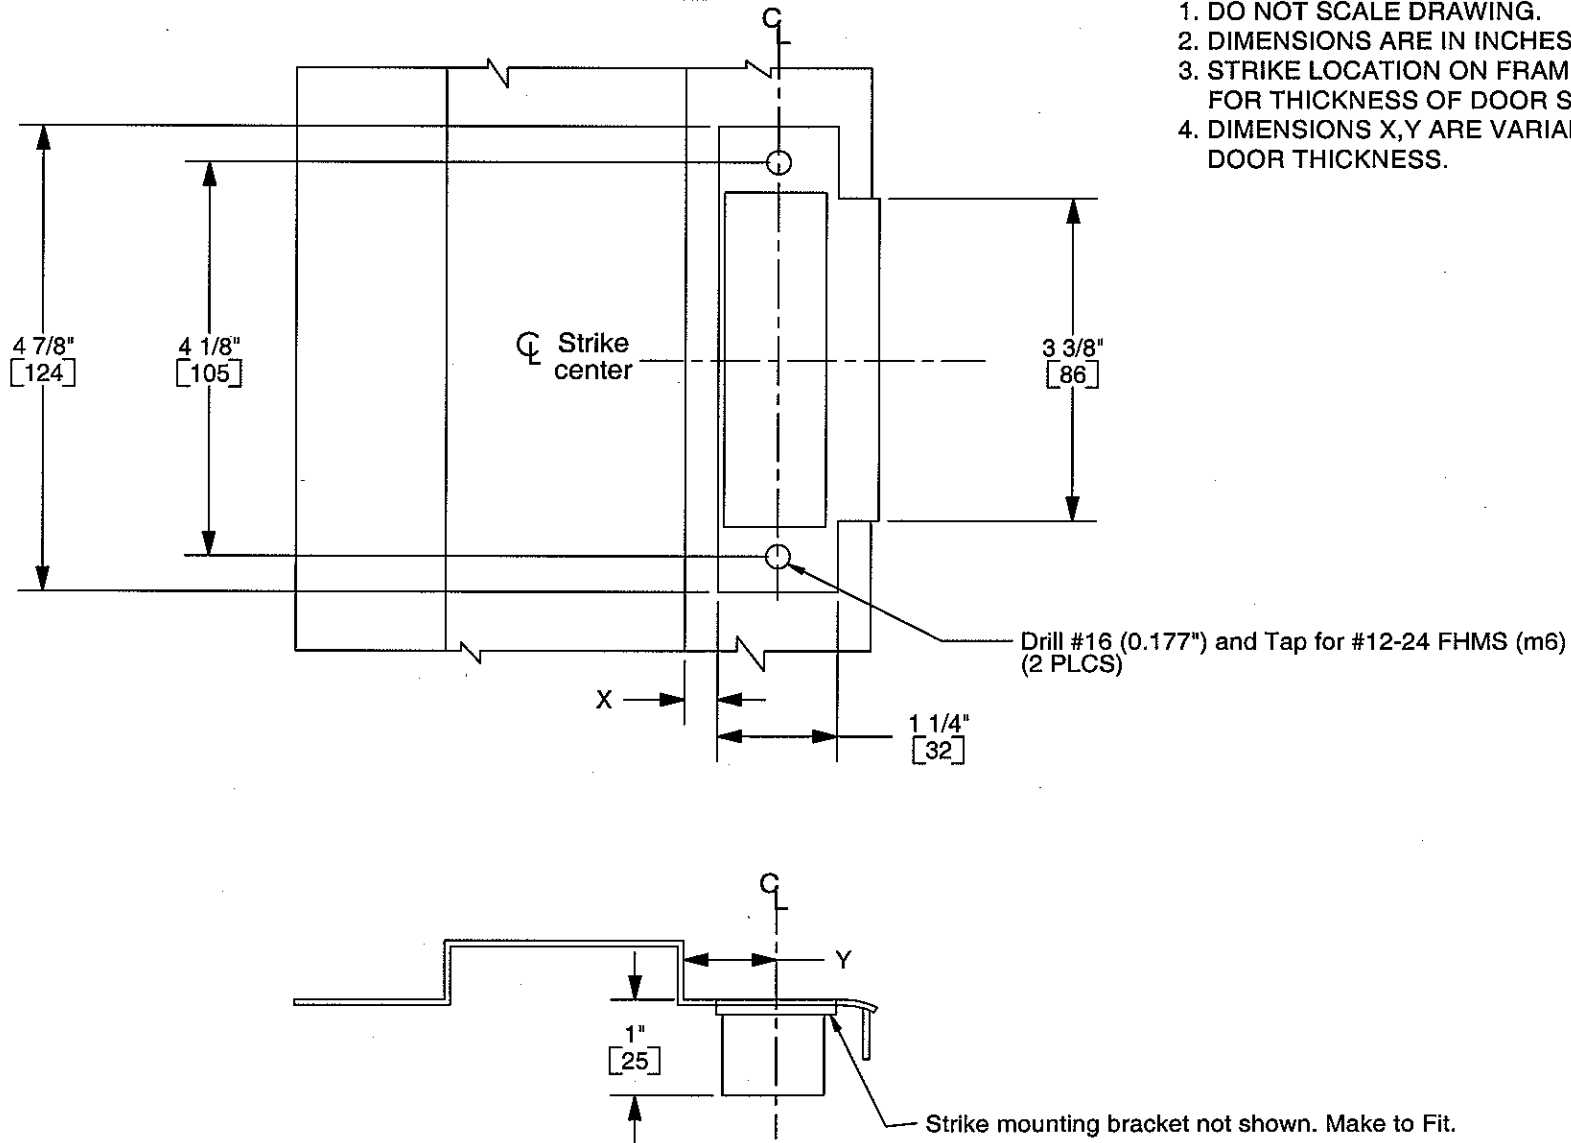

Always consult Dorma's web site for latest template at [www.dorma-usa.com](http://www.dorma-usa.com) or call 1-800-523-8483.

5001, 5002, 5003, 5005, 5006, 5007 STRIKES

METAL JAMB



DORMA Door Controls  
Reamstown, PA 17567

TEMPLATE No. STRIKE 5001M