


TES62
08281185


R12/11SH-1

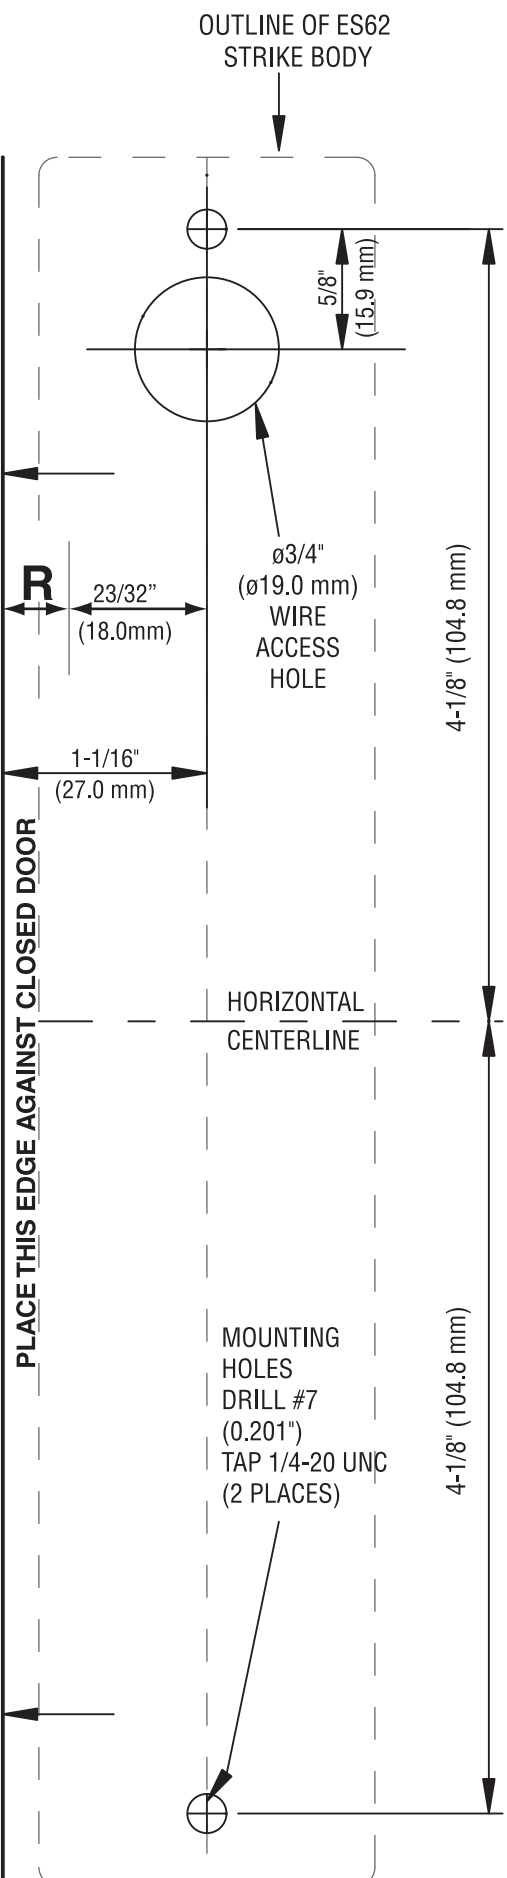

Use these instructions when installing ES62 rim strike with rim exit devices by others.

INSTRUCTIONS

1. Determine the horizontal centerline of the exit device latch and transfer centerline to the frame stop.
2. Position the template onto the frame aligning with centerline and against the closed door. Center-punch the two mounting holes and the wire access hole as shown.
3. Drill and tap the two mounting holes and drill the wire access hole.
4. Refer to the installation instructions for wiring and final installation.

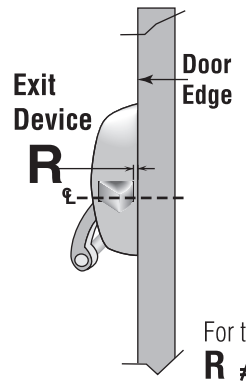

For those exit devices where **R ≠ 11/32" (9.0mm)** shift template accordingly

ES62 TEMPLATE SURFACE MOUNTED RIM STRIKE



DORMA INSTRUCTIONS

USE THESE INSTRUCTIONS WHEN INSTALLING ES62 WITH ANY OF THESE DORMA MODEL RIM EXITS

• 9300 / F9300

• 9700 / F9700

