


# INSTALLATION TEMPLATE

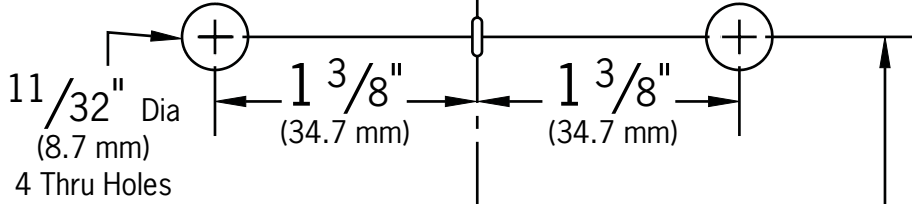

**IMPORTANT**

For high level place outside line at high edge of door  
for flat doors place center line at edge of door  
for low level place inside line at low edge of door

**PowerLever®**  
**Door Lock Series**






P/N 482.093 1105

**REFERENCE ONLY, NOT TO SCALE**  
**DO NOT USE AS A DRILLING TEMPLATE**  
**CALL 800-849-8324**


**IMPORTANT**

For high level place outside line at high edge of door  
for flat doors place center line at edge of door  
for low level place inside line at low edge of door

Locate center of 1" Dia hole on  
center line of 2 1/8" Dia hole  
and in center of door thickness

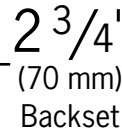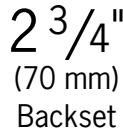

Locate center of 1" Dia hole on  
center line of 2 1/8" Dia hole  
and in center of door thickness

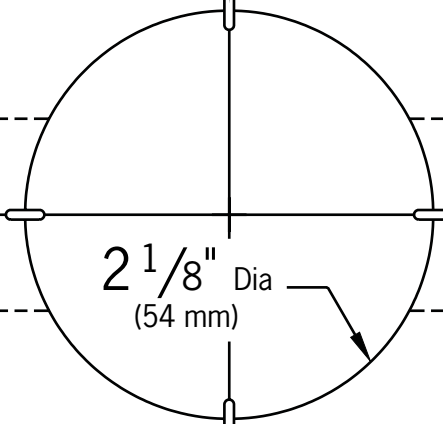

**Bore**  
**1" Dia**  
(25.4 mm)  
Hole for  
Latch Bolt

**Bore**  
**1" Dia**  
(25.4 mm)  
Hole for  
Latch Bolt

