

# INSTALLATION


## RCI 4 and 7 SERIES JIG FRAME PREP JIG

### Instructions

- 1) Take measurement from floor to Centerline (CL) of lockset latch on door.
- 2) Transfer measurement to door frame and mark CL on frame.
- 3) Align CL mark on frame with CL mark (B) on jig.
- 4) Mark frame and drill the two mounting holes (A). (These will be used later to install mounting tabs for electric strike.) Drill and tap for #12 screws.
- 5) Attach jig to frame using screws provided in the strike hardware pack.
- 6) For aluminum frames, router cut out in the frame following the jig. (1/4" single flute carbide bit and a 5/16" guide bushing recommended.)

For hollow metal frames, trace the cutout outline onto the door frame. Remove the jig and cut on the inside of the traced outline using a jigsaw. File corners of frame cutout to accommodate a square faceplate.

- 7) Mount the RCI brand strike using the installation instructions provided with strike.

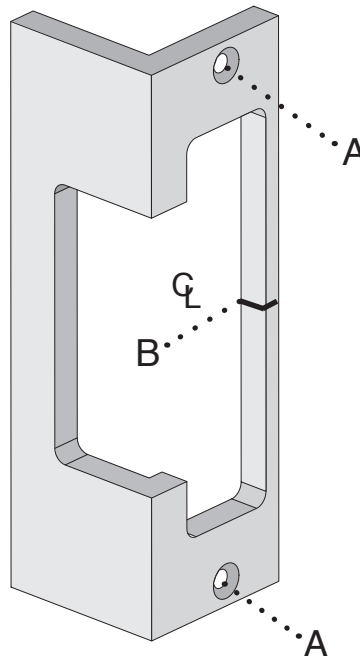

Not to scale