

# MONTAGEANLEITUNG

UNIVERSAL-Mittelschloß  
Art.-Nr. 03 215 (03 224)\*  
UNIVERSAL-Eckschloß  
Art.-Nr. 03 206


1. Grundplatte ① mit aufgeschraubtem Schloß auf Glasausschnitt setzen. Gegenplatte ② ausrichten und mit Senkschrauben ③ M6x24 (SW 4) fest schrauben.  
Anzugsmomente der Schrauben = 8 Nm
2. Kappen ④ in Nocken ⑩ einhaken und aufsetzen. Gewindestifte ⑪ herausdrehen (nur bei Gegenkasten).
3. Rosetten-Unterteile ⑤ in Führungen schieben, bis Profilzylinderlöcher deckungsgleich sind. Profilzylinder einstecken und mit Senkschraube ⑥ M5x35 oder beigelegten Gewindestift ⑦ M6x6 (SW 3) befestigen.
4. Beigelegten Gewindestift ⑨ M4x7 (SW 1,5) in Rosetten-Unterteile eindrehen.
5. Rosetten-Kappen ⑧ auf Rosetten-Unterteile stecken und Gewindestifte ⑨ herausdrehen.

# MOUNTING INSTRUCTIONS



UNIVERSAL-centre lock  
Art.-Nr. 03 215 (03 224)\*  
UNIVERSAL-patch lock  
Art.-Nr. 03 206

1. Set base plate ① with assembled lock onto glass cut-out. Align counterplate ② and fix with countersunk screws ③ M6x24 (with 4mm allen key).  
Tightening torque of screws = 8 Nm
2. Fasten cover caps ④ on pin ⑩ and set them. Loosen setscrews ⑪ (for strike-box only).
3. Set lower parts of roses ⑤ into oval guide holes, so that holes for the profile cylinders are congruent. Insert profile cylinder and connect with countersunk screw ⑥ M5x35 or enclosed setscrew ⑦ M6x6 (3mm Allen key).
4. Fasten enclosed setscrew ⑨ M4x7 (1,5mm Allen key) against lower parts of roses.
5. Set cover caps of roses ⑧ onto lower parts of roses and loosen setscrews ⑨.

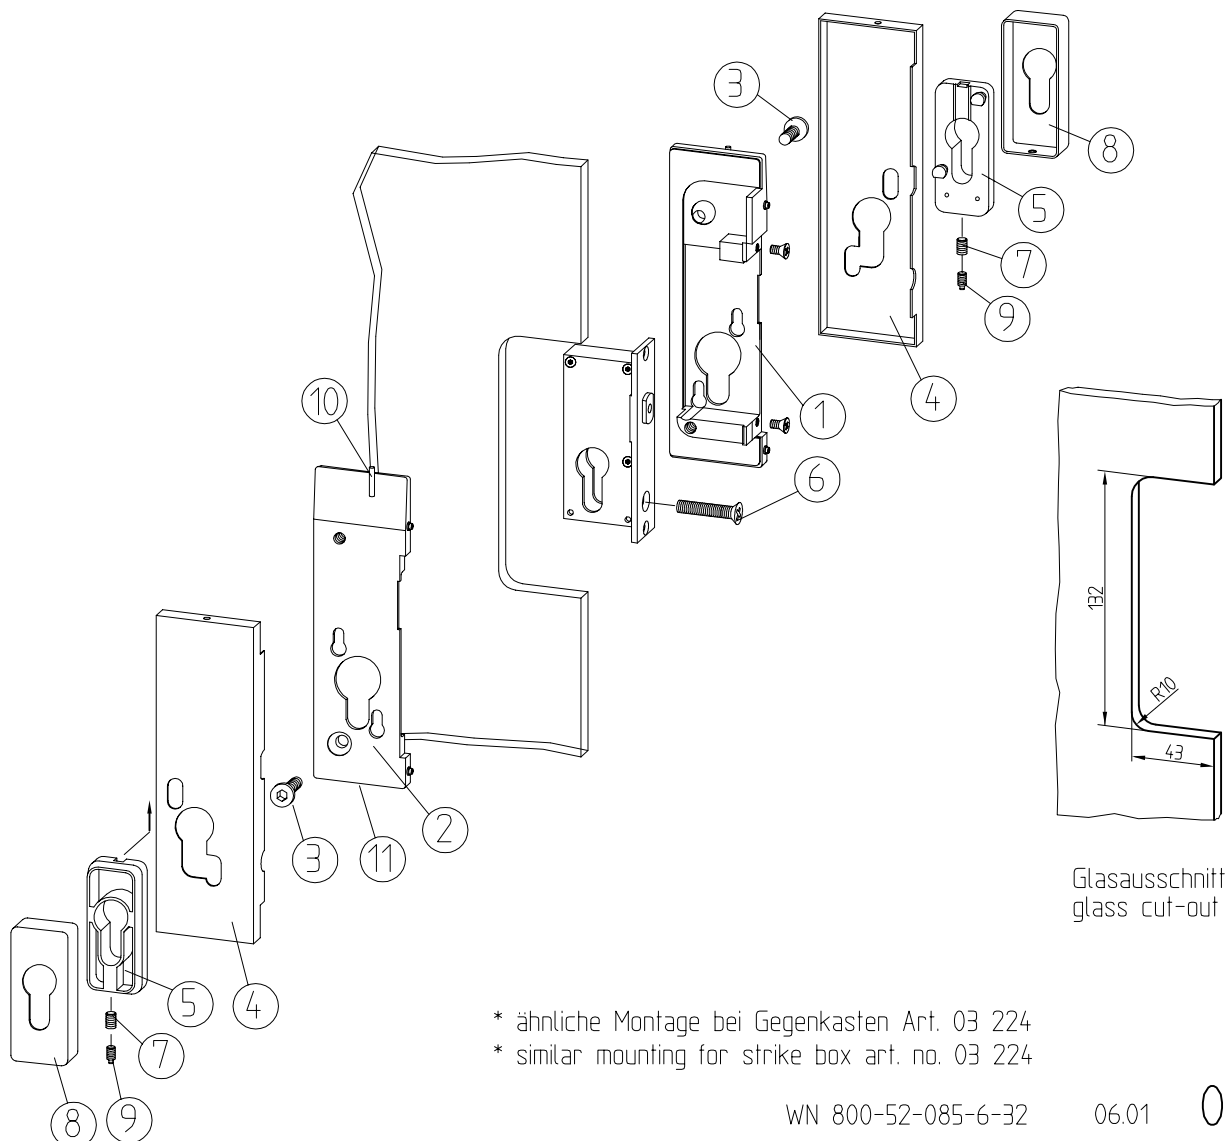

\* ähnliche Montage bei Gegenkasten Art. 03 224  
\* similar mounting for strike box art. no. 03 224