RTS Series Package 27

Offset slide arm steel door and frame - hinges/pivots

Installation instructions

08279251 - 02-2020





Table of contents


	installation instructions	3
L.1	Prepare frame and install closer	3
L.2	Prepare top of door	4
2	Adjustments	5
2.1	Adjust closing speeds	5
2.2	Optional 8511 applied stop (or stop by others)	5

2 RTS88 Closers 08279251 02-2020

1 Installation instructions

1.1 Prepare frame and install closer

Fig.1

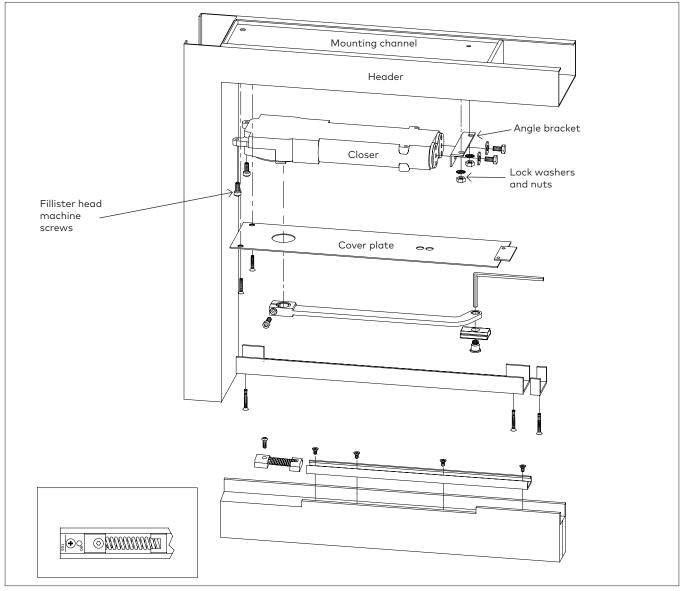

NOTE: 8532 mounting channel is to be installed prior to frame installation.


- 1.1.1 Prepare header according to template.
- 1.1.2 Fasten angle bracket to closer with two hex head machines machine screws and flat washers.
- 1.1.3 Install 2 fillister head machine screws into mounting tabs on closer; make approximately 3 turns.
- 1.1.4 Install closer into mounting channel in header by inserting mounting tabs into mounting bracket.

- 1.1.5 Raise end of closer with angle bracket onto the two 1/4-20 screws installed in mounting channel.
- 1.1.6 Fasten angle bracket with the two remaining 1/4-20 nuts and lock washers.
- 1.1.7 Tighten the 2 fillister head machine screws securely.
- 1.1.8 Install cover plate by sliding tab into frame.
- 1.1.9 Fasten opposite end to mounting bracket with two No. 8-32 flat head machine screws provided.

RTS88 Closers 08279251 02-2020 3

1.2 Prepare top of door

Fig.2

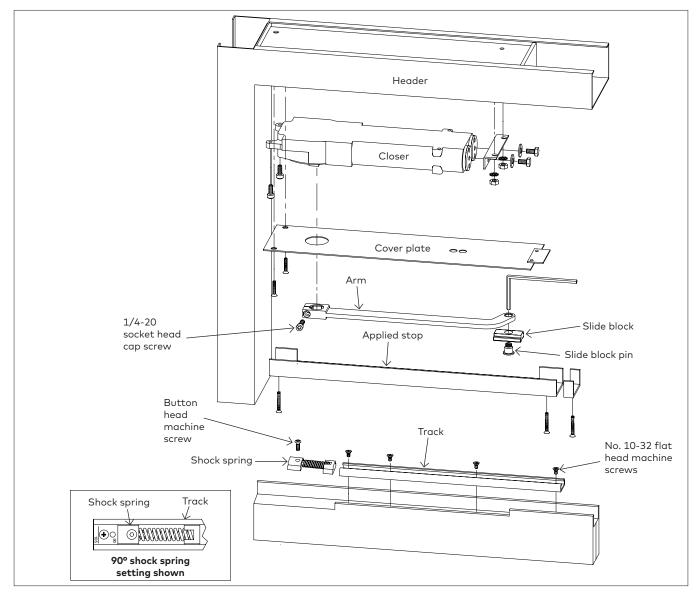


- 1.2.1 Prepare top of door according to template.
- 1.2.2 Assemble shock spring.
- 1.2.3 Slide assembled shock spring into track so end with screw faces the 90° and 105° markings on the track
- 1.2.4 Align edge of shock spring assembly to coincide with 90° or 105° deadstop in closer.
- 1.2.5 Secure shock spring assembly to track with button head machine screw and 1/8" hex wrench.
- 1.2.6 Insert slide block pin through slide block before inserting slide block into track.
- 1.2.7 Fasten track to door with four No. 10-32 flat head machine screws.
- 1.2.8 Slide arm onto spindle as shown, and tighten the 1/4-20 socket head cap screw securely.
- 1.2.9 Position door at approximately 45° of opening.
- 1.2.10 Preload arm to a position where the hole in arm aligns with slide block pin.
- 1.2.11 Thread slide block pin into arm wiht 3/16" hex wrench.
- 1.2.12 TIGHTEN SECURELY!

2 Adjustments

2.1 Adjust closing speeds


Fig.3

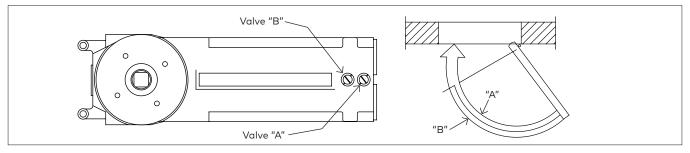

- 2.1.1 Valve "A" controls closing speed from maximum opening angle to 0°.
- Clockwise decreases closing speed
- Counter-clockwise increases closing speed
- 2.1.2 Valve "B" increases closing speed from maximum openig angle to 20°.Counter-clockwise increases closing speed.

2.2 Optional 8511 applied stop (or stop by others)

Fig.4

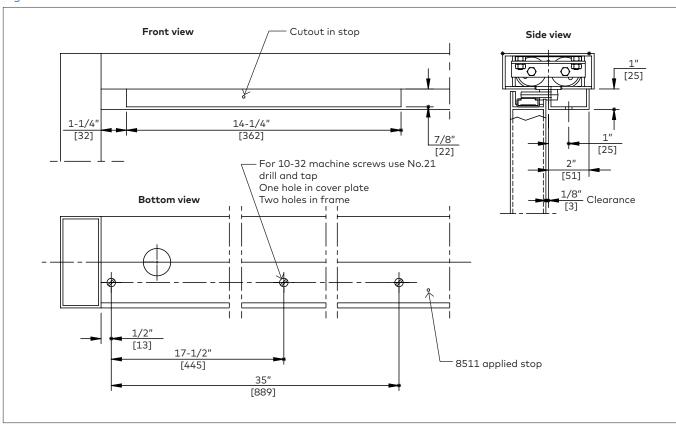

2.1.1 Prepare header according to template above.

2.1.2 Install applied stop as shown in Fig 2. with three No.10-32 flat head machine screws.

RTS88 Closers 08279251 02-2020 5