

73071 Vary – 73073 Vary Flex

1 Important Instructions



- The locking mechanism works smoothly. No force should be applied. This should be particularly avoided when inserting the key in the lock.
- The locking mechanism can only be changed over to another pair of keys if a valid key is still available. The lock should be converted to a new pair of keys immediately if a key is lost.
- Opening the lock with a damaged key can result in damage to the lock.
- The function of the lock could not be secured, if you use damaged or heavily worn out keys. We recommend to check the condition of the keys before using them and to not use or, if necessary, to change the keys, if they are damaged or heavily worn out.
- The lock must not be lubricated.
- The lock may only be installed by specialist personnel and only opened by the manufacturers. Unauthorised opening will lead to invalidation of any guarantee claims.
- Only original Kaba Mauer keys are to be used should additional keys be required, as otherwise no guarantee claims may be raised.

2 Opening

- Insert key in the keyhole as specified in the table below and turn in the appropriate direction until stop position is reached.

Lock Installation Position	Key Insertion Position	Direction of Turn
Bolt left, keyhole horizontal	Long bit left	Clockwise
Bolt down, keyhole vertical	Long bit down	Clockwise
Bolt up, keyhole vertical	Long bit up	Clockwise




Diagram 1: Key

- Version 73071: The key cannot be removed when the lock is open.
- Version 73073: The key can be removed when the lock is open.

3 Locking

- Turn the key back to the original position.
- The key is to be removed after locking and kept in a safe place where it is not accessible to unauthorised persons.

4 Changing over (version 73071 Vary)

- Insert the key in the keyhole and turn it until stop position is reached (approx. 130°), (see 2 or diagram 3).
- Press the sprung conversion pin in the base of the lock casing until stop (see diagram 2).

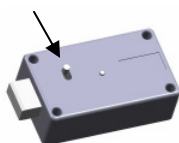











Diagram 2: Conversion pin

- While the conversion pin is still pressed, turn the key clockwise until approx. 180° (see diagram 4). Let go the conversion pin and remove the key.
- Insert the new key in the same manner as the old one was removed (see diagram 5). Turn the key anti-clockwise to the stop position (approx. 180°) and remove it. The lock has now been changed over to a new locking.


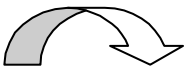



Conversion for horizontal installation:

<p>Diagram 3: Insert valid key (long bit on left)</p> 	<p>Turn key until 130°</p>  <p>clockwise</p>	<p>After turning do not remove key</p> 
<p>Diagram 4: Press conversion pin until stop and keep it pressed</p> 	<p>Turn key until 180°</p>  <p>clockwise</p>	<p>After turning remove key</p> 
<p>Diagram 5: Insert new key (long bit on right)</p> 	<p>Turn key 180°</p>  <p>anti-clockwise</p>	<p>After turning remove key</p> 

5 Changing over (version 73073 Vary Flex)

- Insert the key in the keyhole and turn it until stop position is reached (approx. 180°), (see 2 or diagram 6).
- Insert the new key in the same manner as the old one was removed (see diagram 7). Turn the key anti-clockwise to the stop position (approx. 180°) and remove it. The lock has now been changed over to a new locking.

Conversion for horizontal installation:

<p>Diagram 6: Insert valid key (long bit on left)</p> 	<p>Turn key 180°</p>  <p>clockwise</p>	<p>After turning remove key</p> 
<p>Diagram 7: Insert new key (long bit on right)</p> 	<p>Turn key 180°</p>  <p>anti-clockwise</p>	<p>After turning remove key</p> 