

1 Important Instructions



- The locking mechanism works smoothly. No force should be applied. This should be particularly avoided when inserting the key in the lock.
- The locking mechanism can only be changed over to another pair of keys if one valid key is still available. The lock should be converted to a new pair of keys immediately if a key is lost.
- Opening the lock with a damaged key can result in damage to the lock.
- The function of the lock could not be secured, if you use damaged or heavily worn out keys. We recommend to check the condition of the keys before using them and to not use or, if necessary, to change the keys, if they are damaged or heavily worn out.
- The lock must not be lubricated.
- The lock may only be installed by specialist personnel and only opened by the manufacturers. Unauthorised opening will lead to invalidation of any guarantee claims.
- Only original Kaba Mauer keys are to be used should additional keys be required, as otherwise no guarantee claims may be raised.

2 Opening

- Insert the key in the keyhole (long bit left). Then turn the key clockwise until stop position (approx. 140°) is reached (see diagram 1). The lock is open. The key cannot be removed in this position.

3 Locking

- Turn the key anti-clockwise until stop position (approx. 0°) is reached. The lock is locked.

4 Changing over

- **NB:** The lock should only be changed over with the safe opened.
- Insert the key in the keyhole (long bit left). Then turn the key clockwise until stop position (approx. 140° but at least 90°) is reached (see diagram 1 or 2).

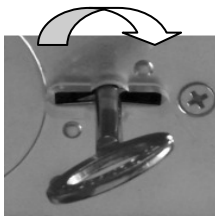


Diagram 1: Key position approx. 140°

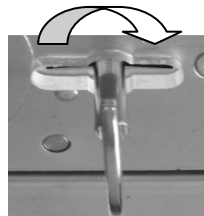


Diagram 2: Key position approx. 90°

- Insert the change activator in the guide at the back of the lock (see diagram 3) and turn the activator anti-clockwise until stop position is reached (see diagram 4).



Diagram 3: Guide change activator

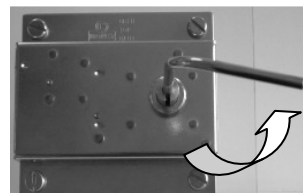


Diagram 4: Turn change activator

- Continue to turn the key until stop-position (approx. 180°) is reached (see diagram 5). The key can be removed in this position.
- Remove the key and insert a new key (long bit right).

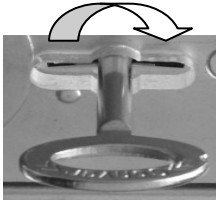


Diagram 5: Key position approx. 180°

- Turn the key anti-clockwise until stop position (approx. 80°) is reached (see diagram 6).
- Then turn the change activator at the back of the lock until stop position is reached and withdraw the activator (see diagram 7)

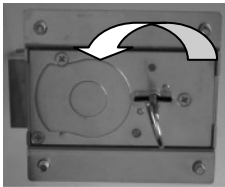


Diagram 6: Key position approx. 80°

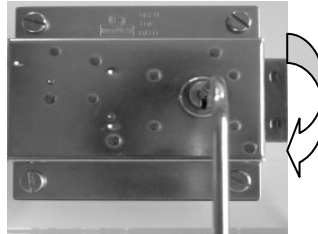


Diagram 7: Turn change activator

- Turn the key now anti-clockwise until stop position (approx. 0°) is reached (see diagram 8). The lock is locked and changed over to a new locking. Remove the key.

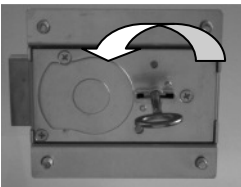


Diagram 8: Key position approx. 0°